

MONTAGEANLEITUNG

sun-10398abc · Skoda Octavia III Kombi 2013-2020

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване


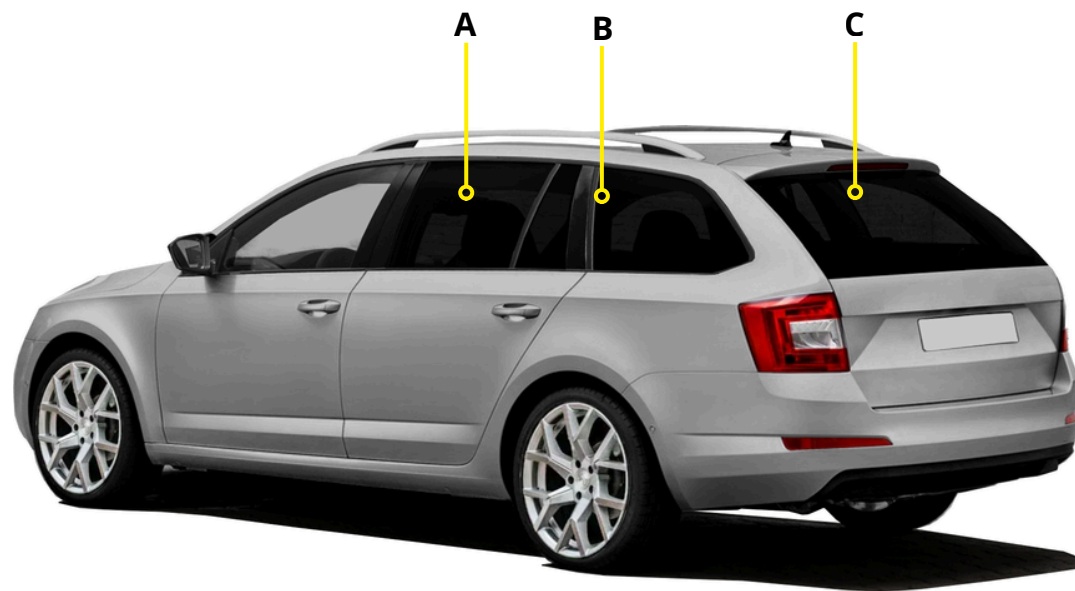


2x A




4x SC6-40

2x B

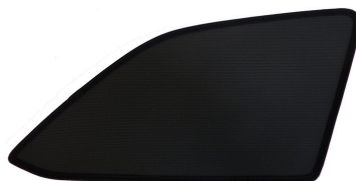


2x SC8-20

1x C






2x SC9-20

1x

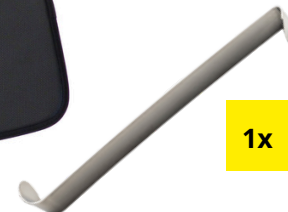



MONTAGEANLEITUNG

sun-10398abc · Skoda Octavia III Kombi 2013-2020

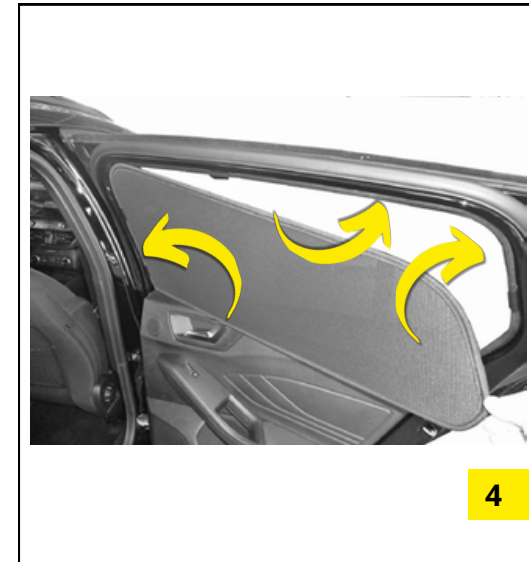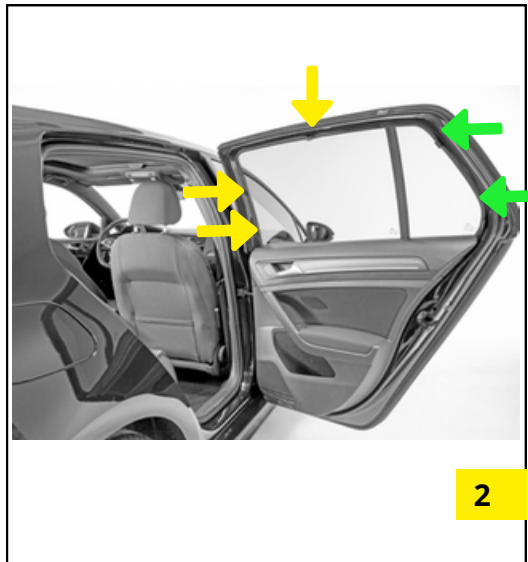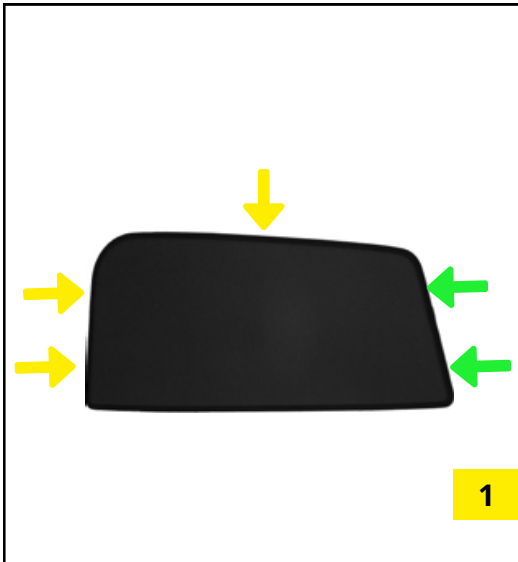

MONTAGEANLEITUNG

sun-10398abc · Skoda Octavia III Kombi 2013-2020

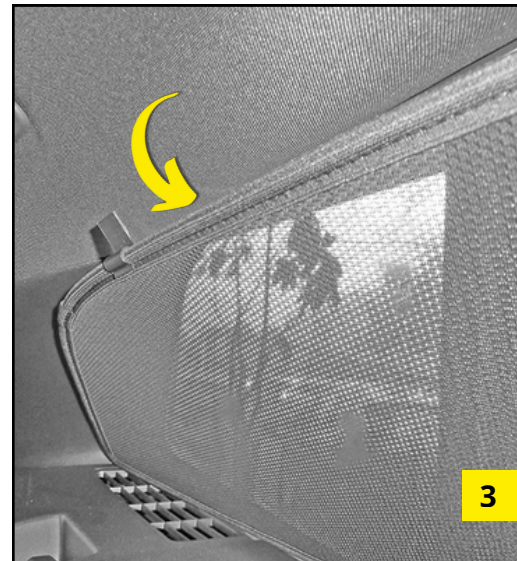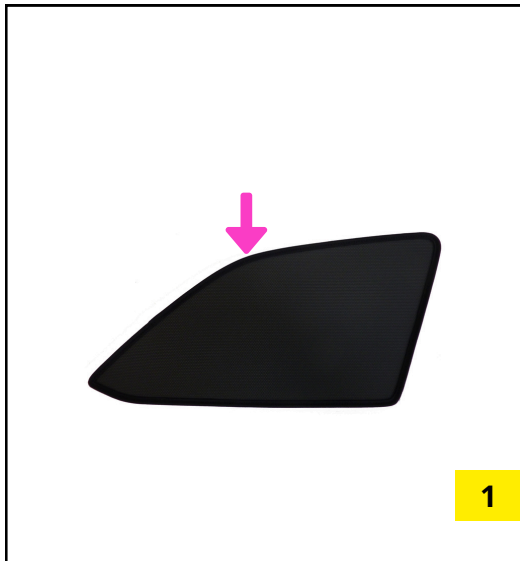

MONTAGEANLEITUNG

sun-10398abc · Skoda Octavia III Kombi 2013-2020

