

MONTAGEANLEITUNG

sun-10353abc · VW T6 2015-

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija



HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

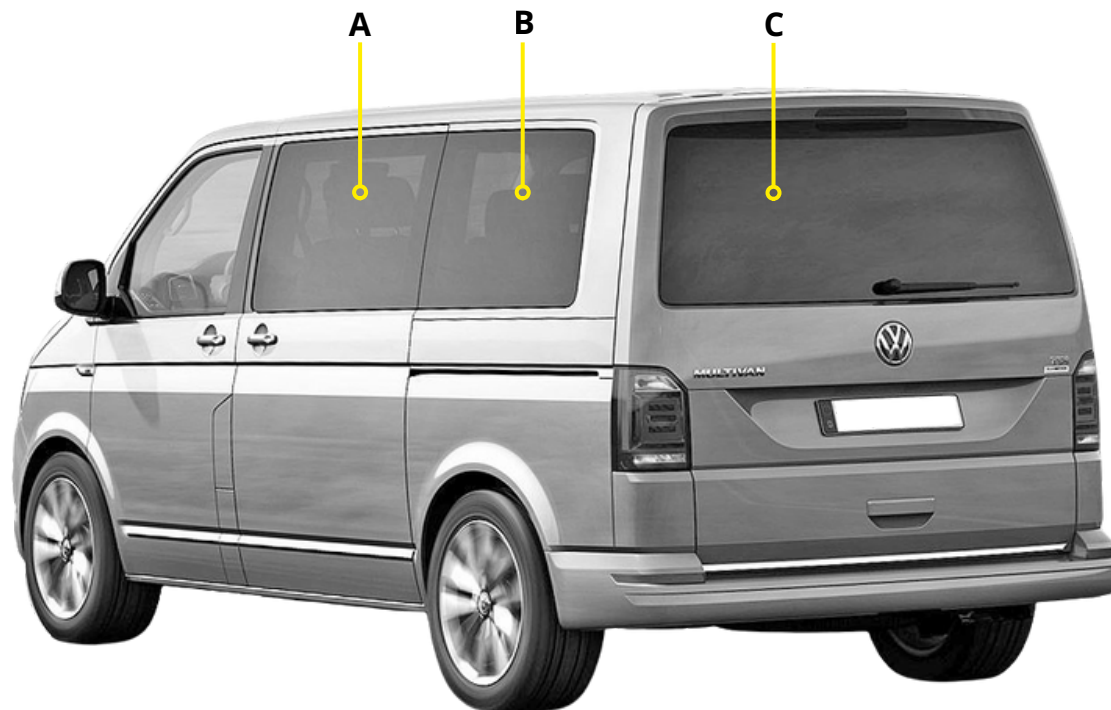


2x A

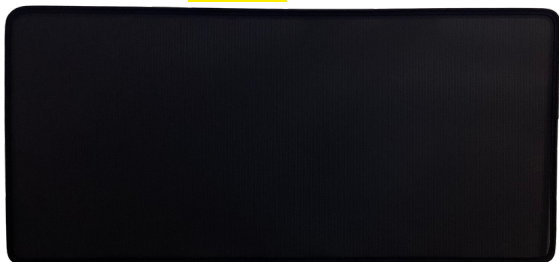



4x SC8-20

2x B




4x SC8-20

1x C

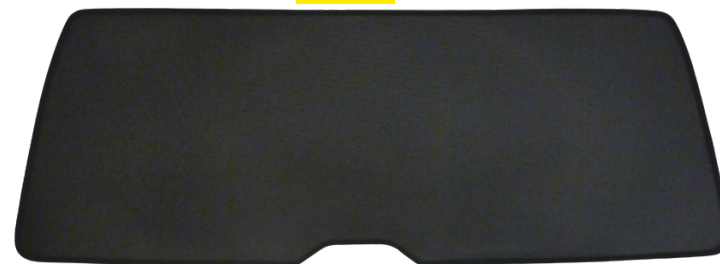


5x SC8-10

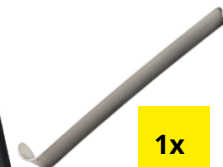

1x




MONTAGEANLEITUNG

sun-10353abc · VW T6 2015-

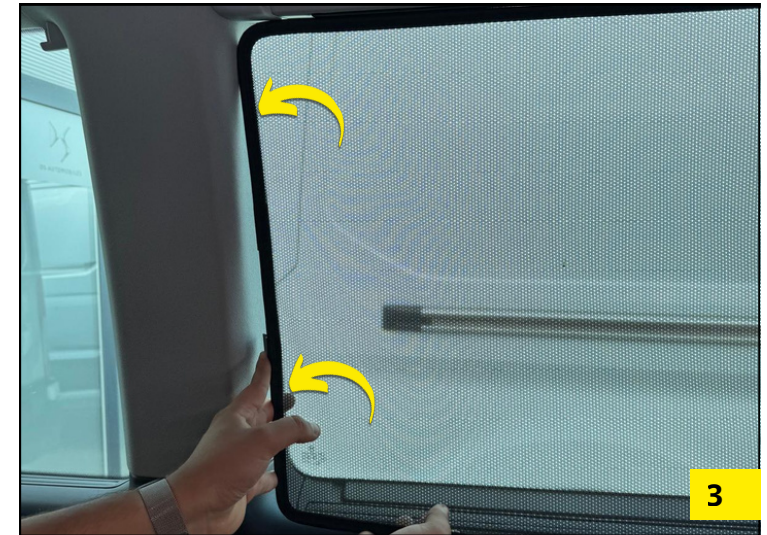

MONTAGEANLEITUNG

sun-10353abc · VW T6 2015-

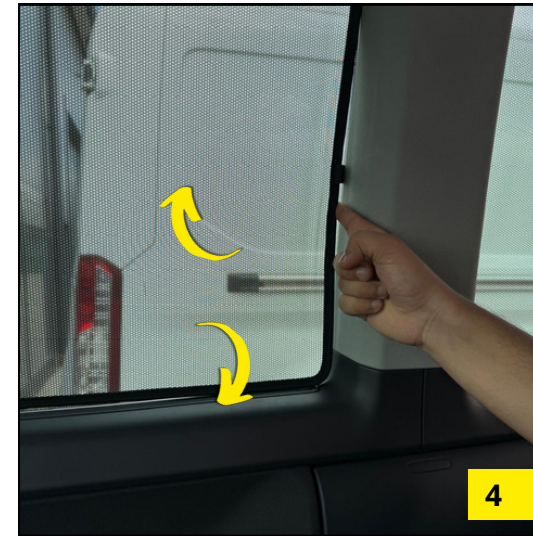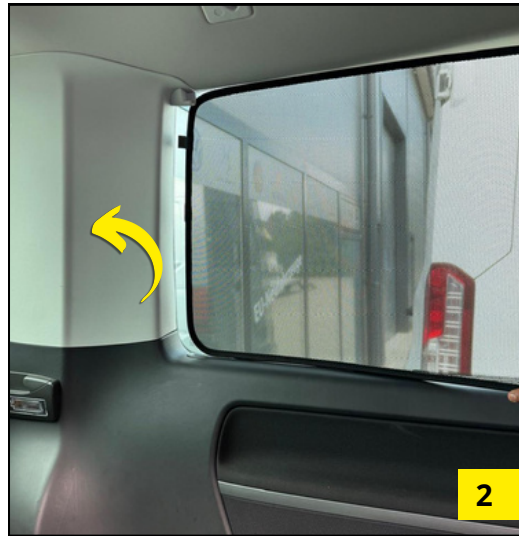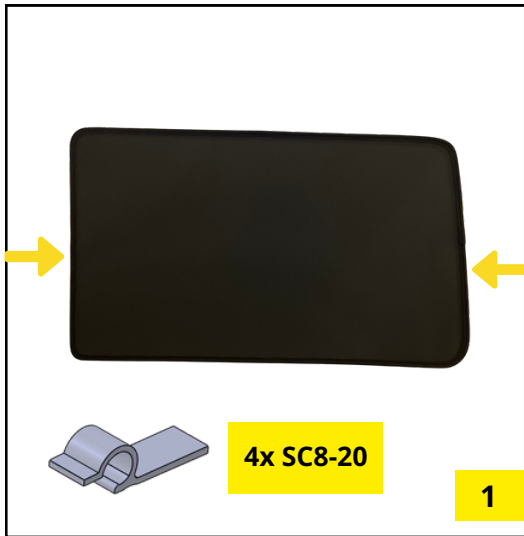

MONTAGEANLEITUNG

sun-10353abc · VW T6 2015-

