

MONTAGEANLEITUNG

sun-10337abc- BMW 3er Touring F31 2012-2019 SunClip Auto Sonnenschutz

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

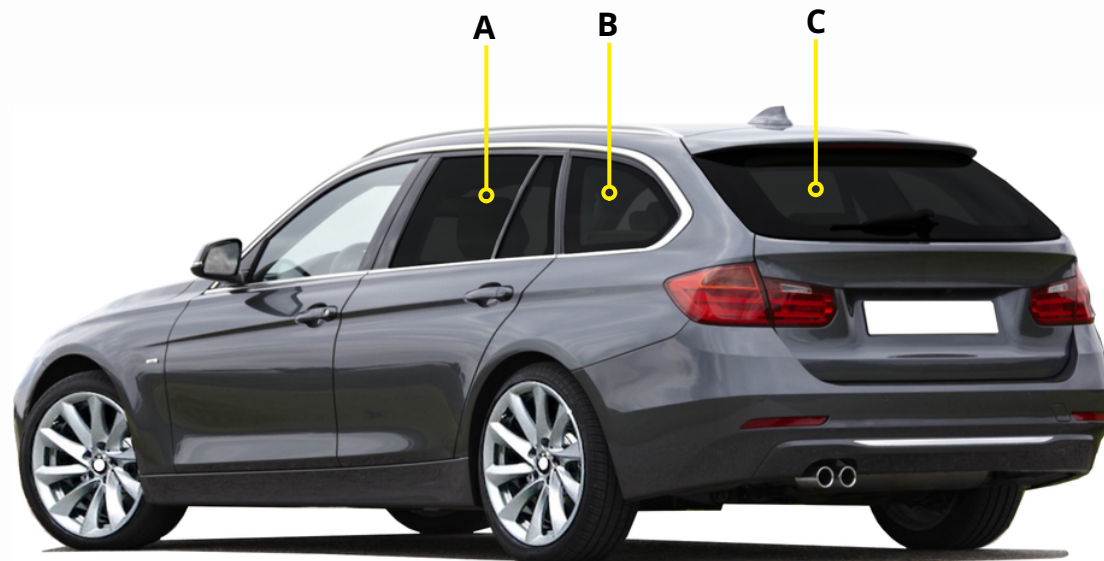


2x A




2x SC8-10



2x SC8-20



4x KC1



2x B




2x SC8-10



1x C



2x SC8-20







2x KC3




MONTAGEANLEITUNG

sun-10337abc- BMW 3er Touring F31 2012-2019

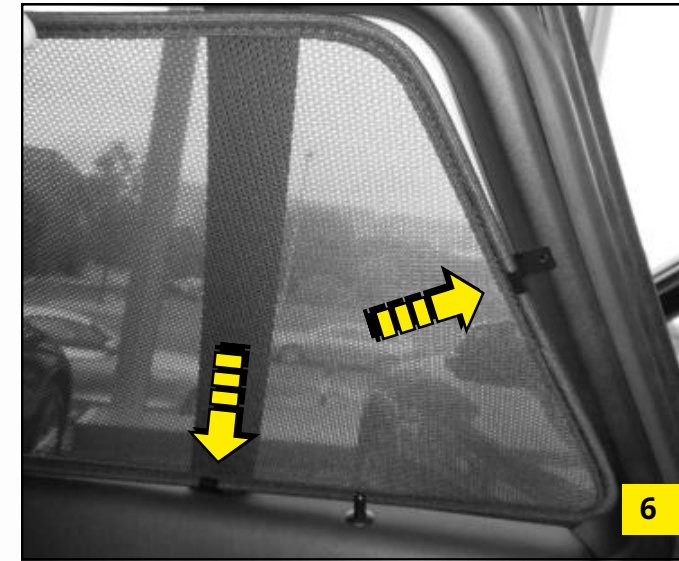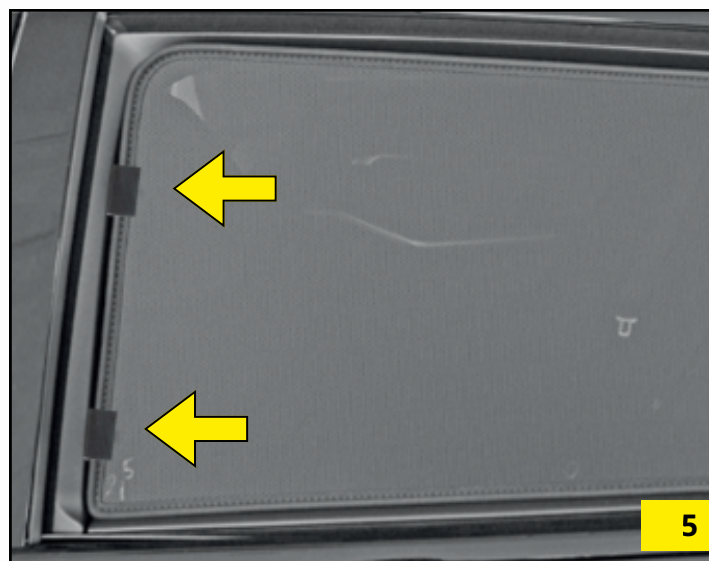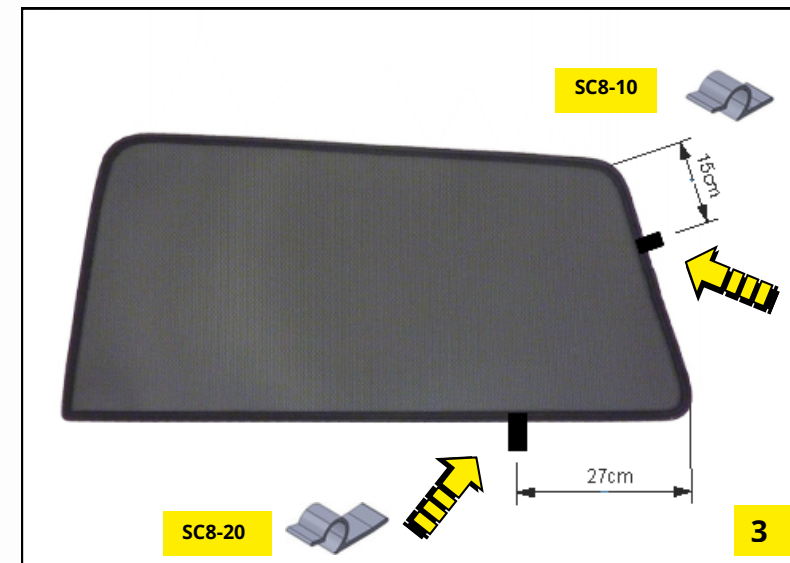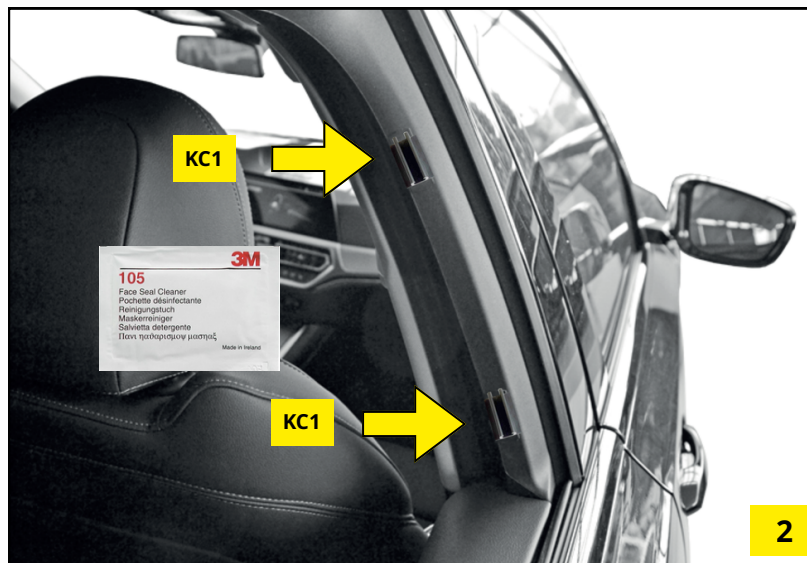



MONTAGEANLEITUNG

sun-10337abc- BMW 3er Touring F31 2012-2019

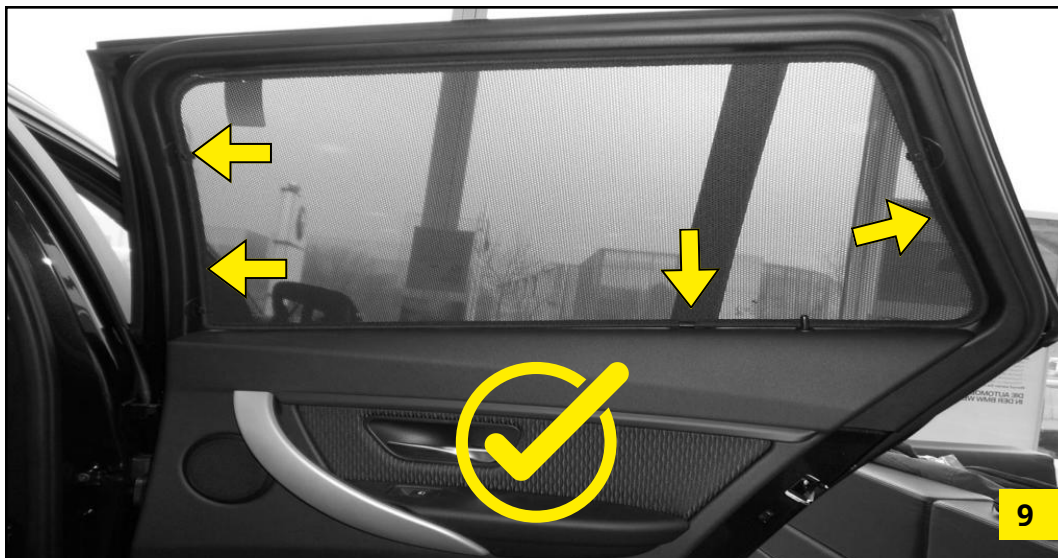



MONTAGEANLEITUNG

sun-10337abc- BMW 3er Touring F31 2012-2019

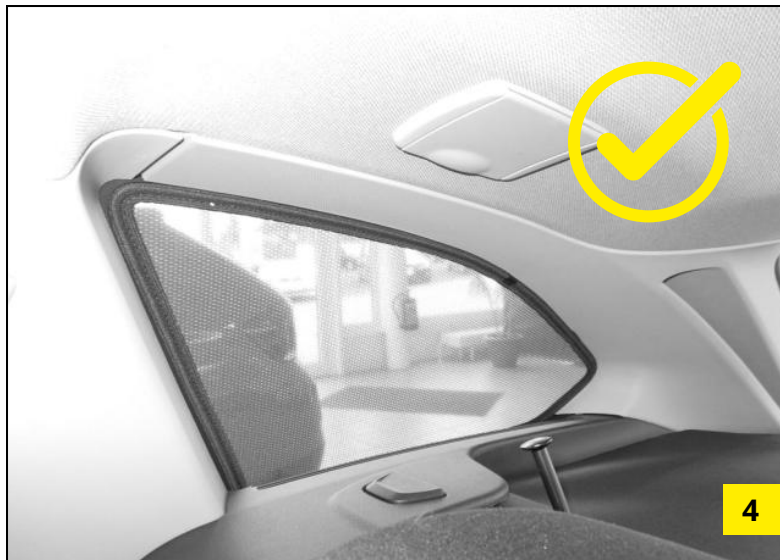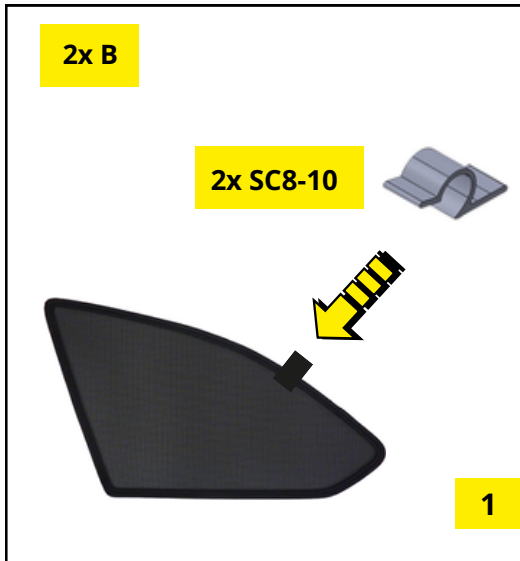

MONTAGEANLEITUNG

sun-10337abc- BMW 3er Touring F31 2012-2019

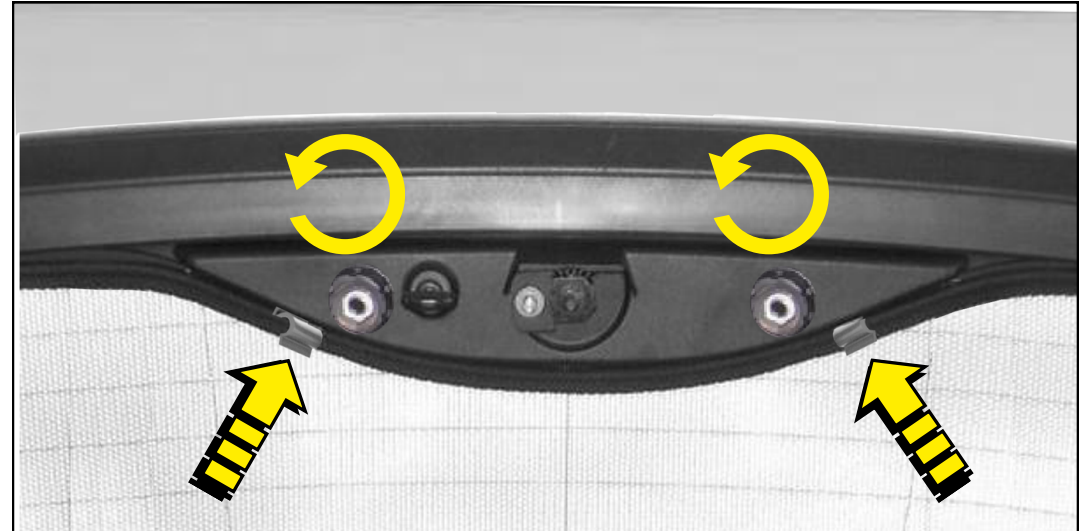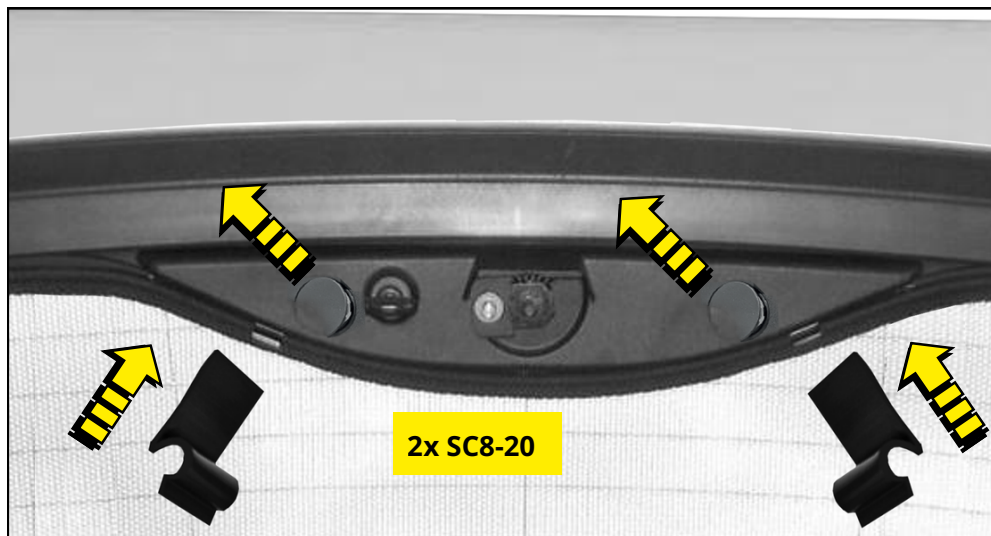

MONTAGEANLEITUNG

sun-10337abc- BMW 3er Touring F31 2012-2019

