

MONTAGEANLEITUNG

sun-10495abc-L1-fo · Ford Tourneo Custom L1 2024- SunClip Auto Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

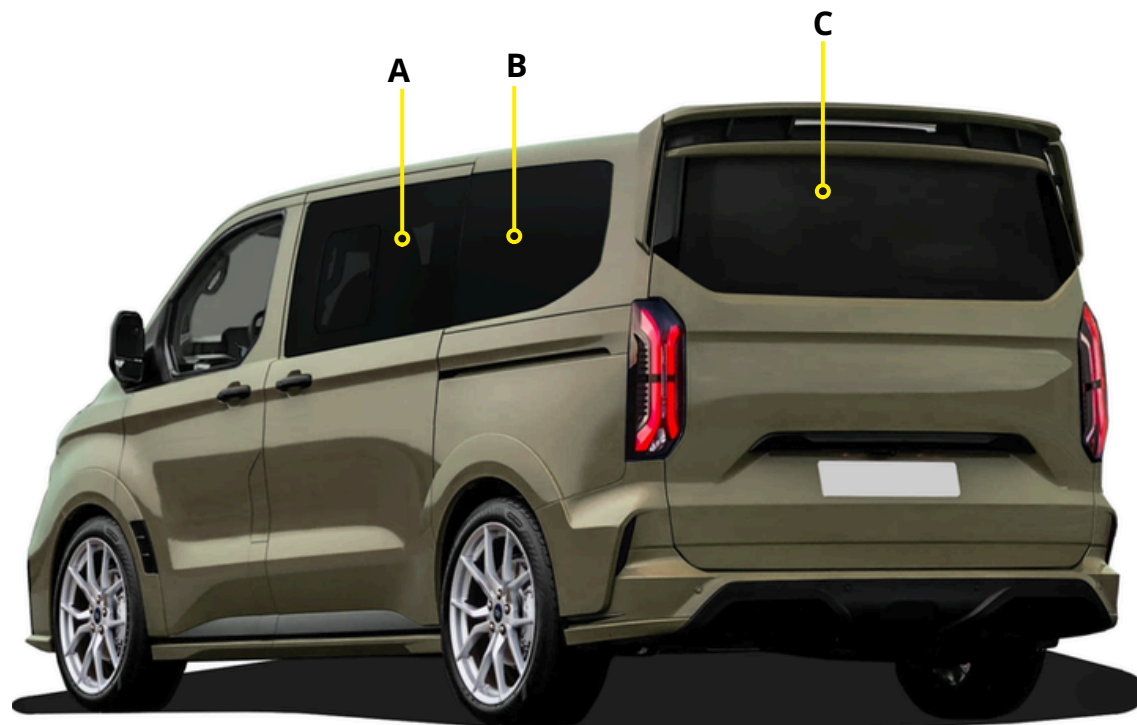

2x A



6x SC8-20



2x B



6x SC8-20




1x C



4x SC9



1x

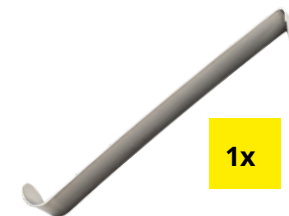

MONTAGEANLEITUNG

sun-10495abc-L1-fo · Ford Tourneo Custom L1 2024- SunClip Auto Sonnenschutz

2x A




6x SC8-20



1



2

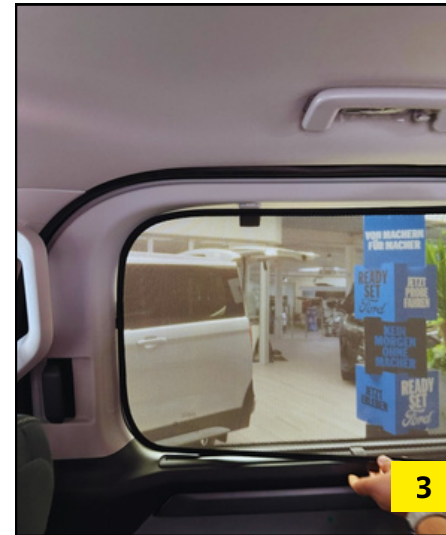

3



4



5




6



7

MONTAGEANLEITUNG

sun-10495abc-L1-fo · Ford Tourneo Custom L1 2024- SunClip Auto Sonnenschutz

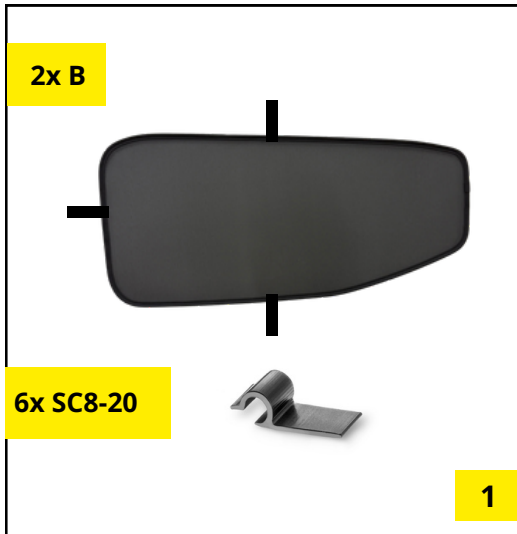

MONTAGEANLEITUNG

sun-10495abc-L1-fo · Ford Tourneo Custom L1 2024- SunClip Auto Sonnenschutz

