

MONTAGEANLEITUNG

sun-10417abc · Renault Kangoo, Mercedes-Benz T-Klasse, Nissan Townstar 2021-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

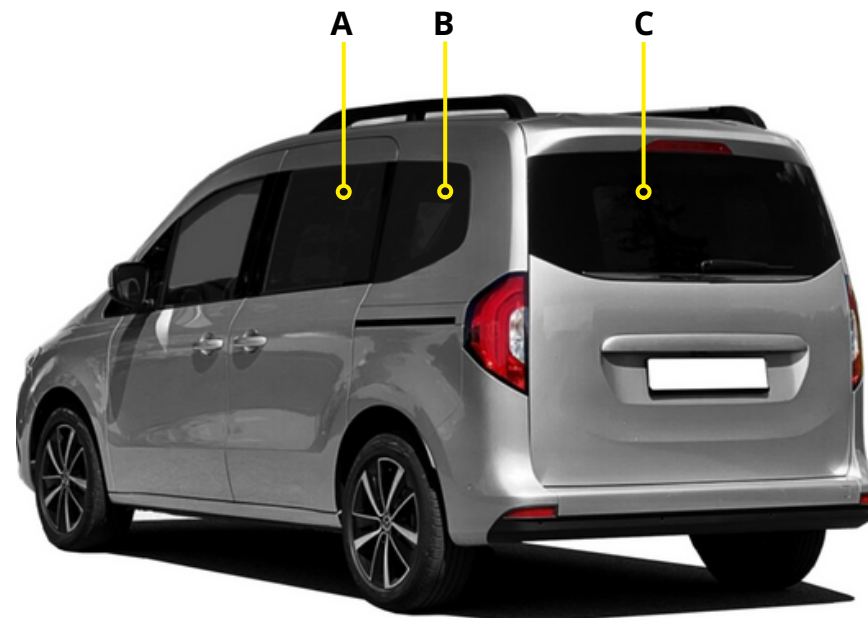

2x A




10x SC6-40



2x B




4x SC8-20

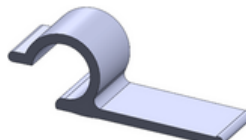

1x C



4x SC8-20


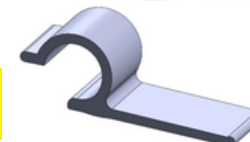


1x







MONTAGEANLEITUNG

sun-10417abc · Renault Kangoo, Mercedes-Benz T-Klasse, Nissan Townstar 2021-

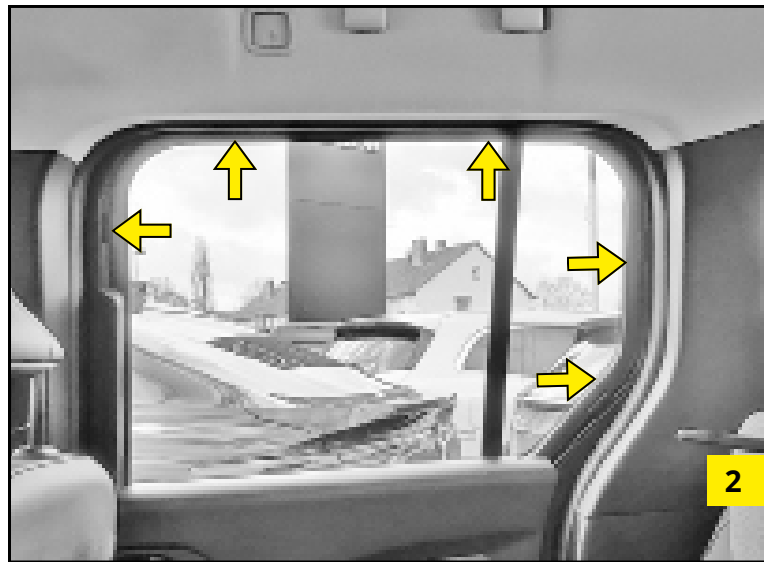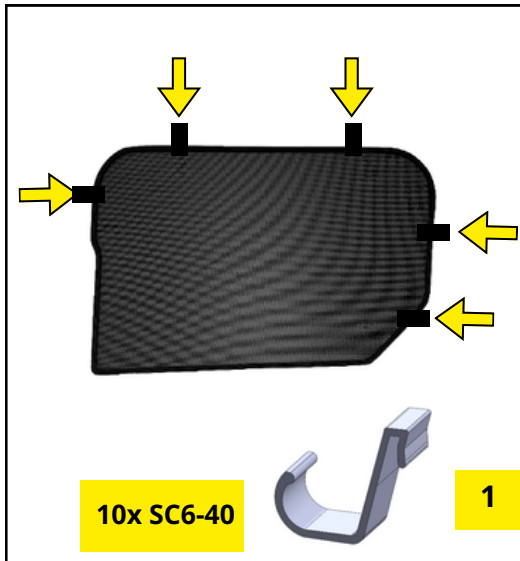

MONTAGEANLEITUNG

sun-10417abc · Renault Kangoo, Mercedes-Benz T-Klasse, Nissan Townstar 2021-

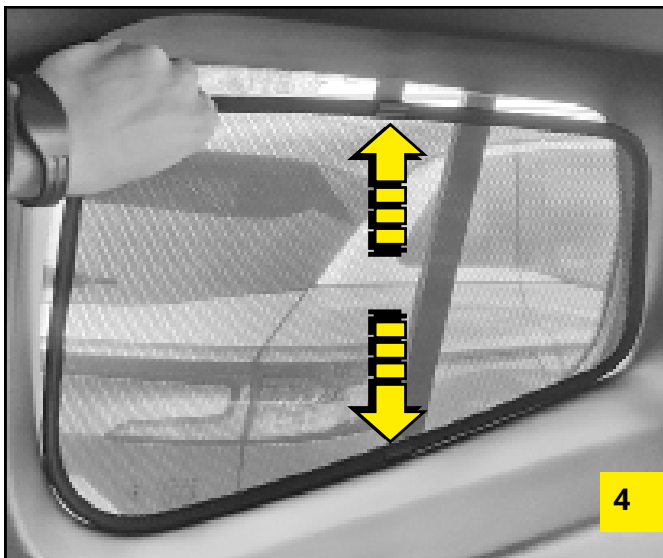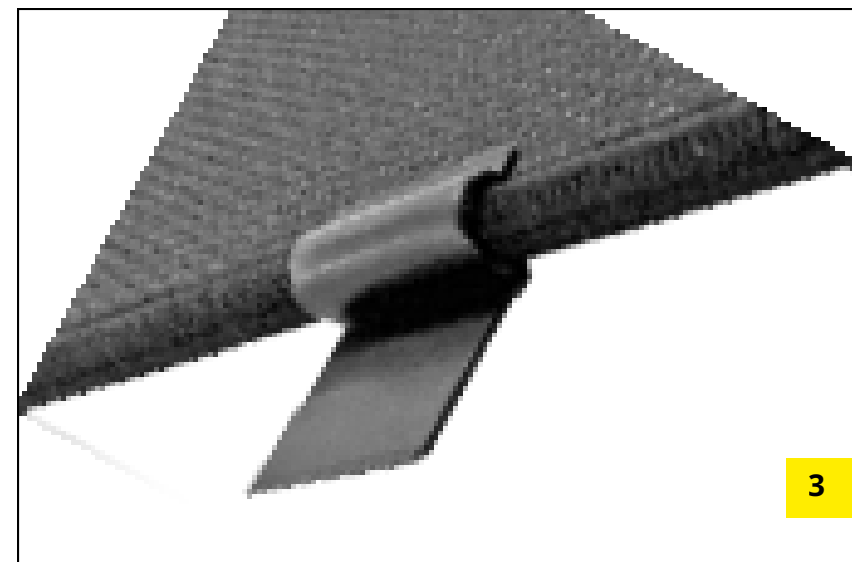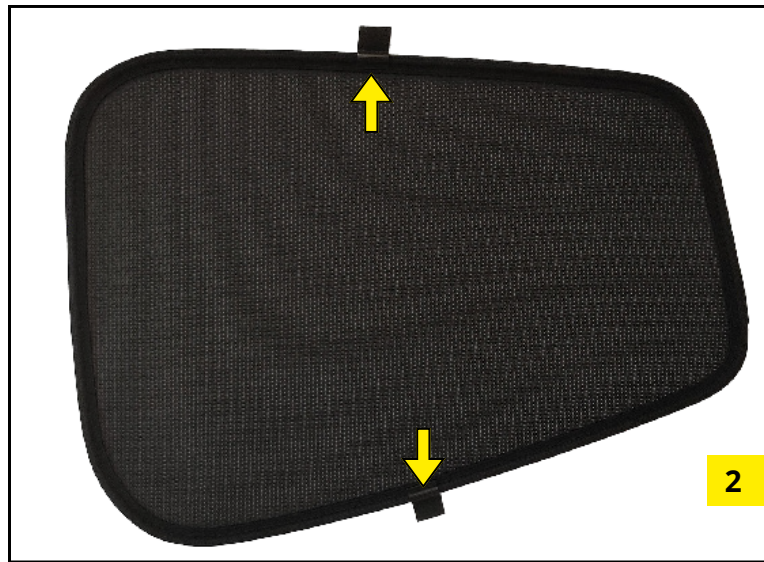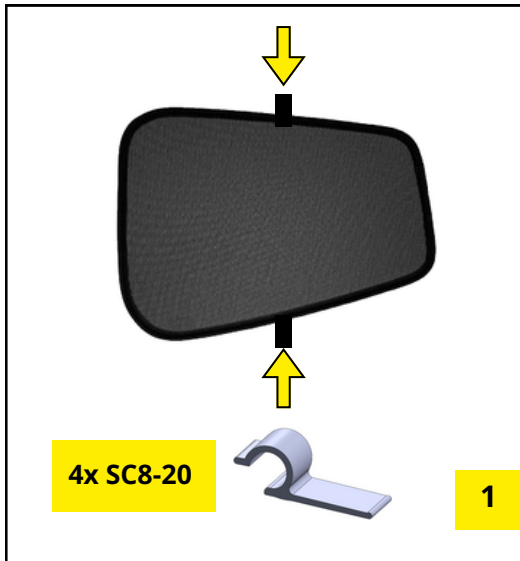

MONTAGEANLEITUNG

sun-10417abc · Renault Kangoo, Mercedes-Benz T-Klasse, Nissan Townstar 2021-

