

MONTAGEANLEITUNG

sun-10335abc VW Touran 2015-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija


HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

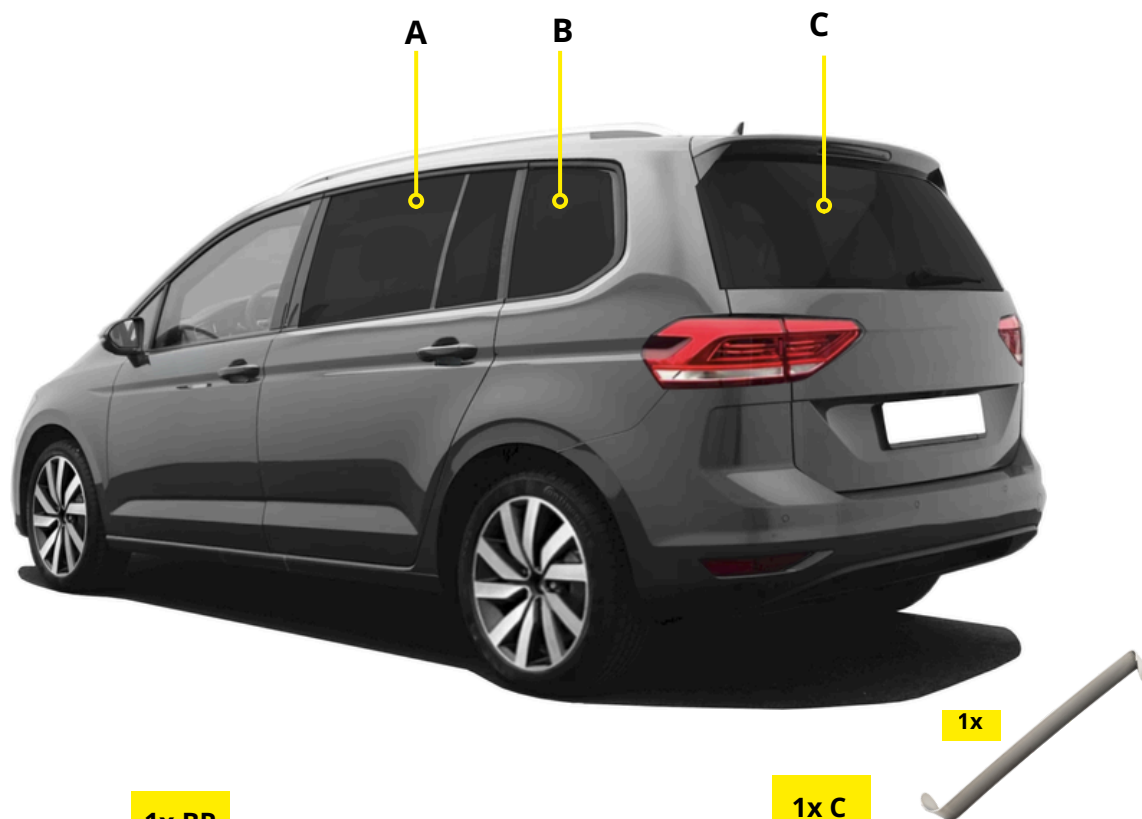

2x A



8x SC3-40

1x BL



1x BR



1x C




2x SC27

MONTAGEANLEITUNG

sun-10335abc VW Touran 2015-

2x A




8x SC3-40

1



2

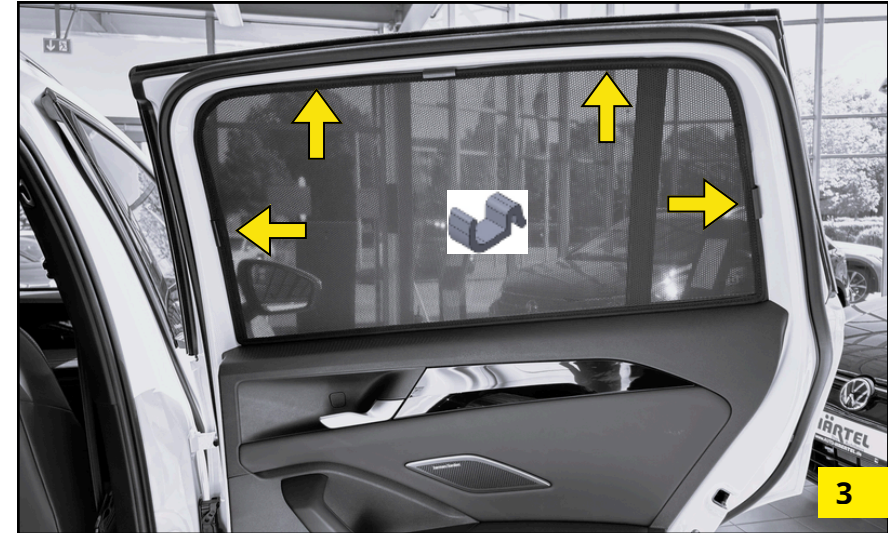

3



5



6



7

MONTAGEANLEITUNG

sun-10335abc VW Touran 2015-

1x BL



1x BR



1



MONTAGEANLEITUNG

sun-10335abc VW Touran 2015-

