

MONTAGEANLEITUNG

sun-10386abc · Ford Focus Turnier 2011-2018

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване

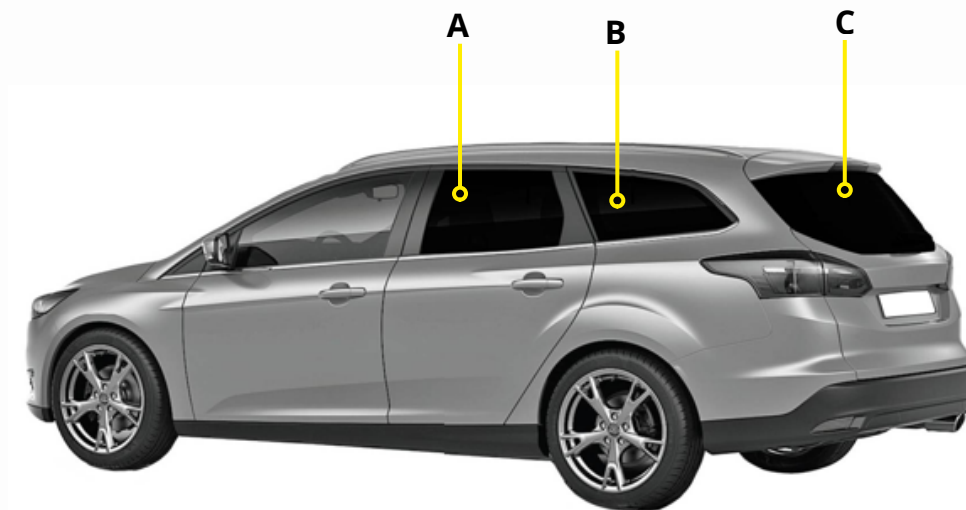

2x A




8x SC11-20

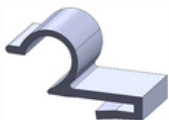

1x BL



4x SC8-20




1x BR



1x C



2x SC8-20





1x



MONTAGEANLEITUNG

sun-10386abc · Ford Focus Turnier 2011-2018

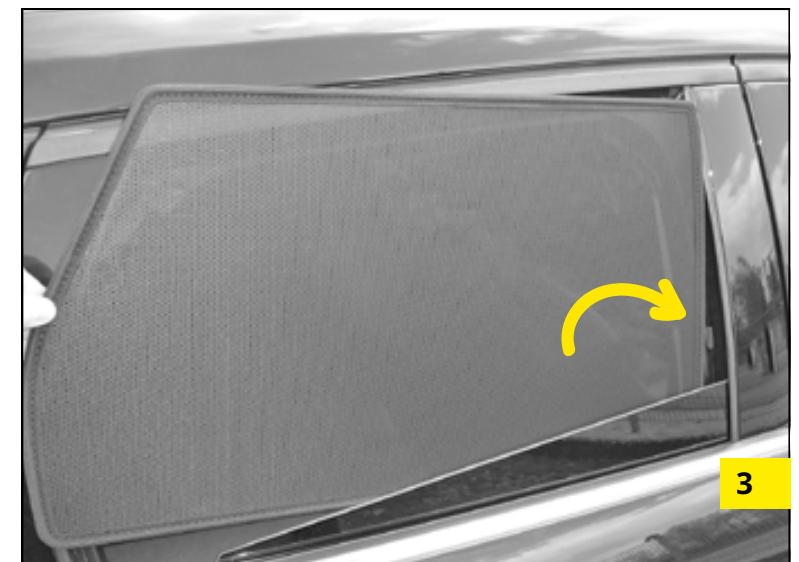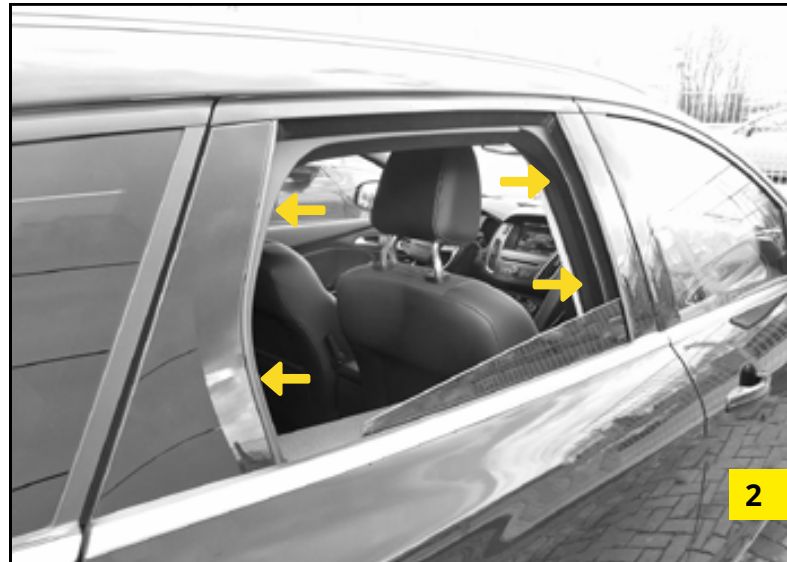

MONTAGEANLEITUNG

sun-10386abc · Ford Focus 2012-2018



MONTAGEANLEITUNG

sun-10386abc · Ford Focus Turnier 2011-2018

