

# MONTAGEANLEITUNG

sun-10450ac · Renault Zoe 2013- SunClip Sonnenschutz

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató

CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване



2x A




6x SC6-40




1x C



2x SC10-20






1x

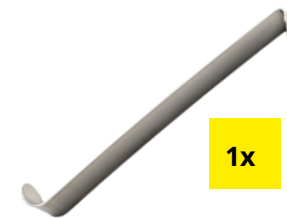

# MONTAGEANLEITUNG

sun-10450ac · Renault Zoe 2013- SunClip Sonnenschutz

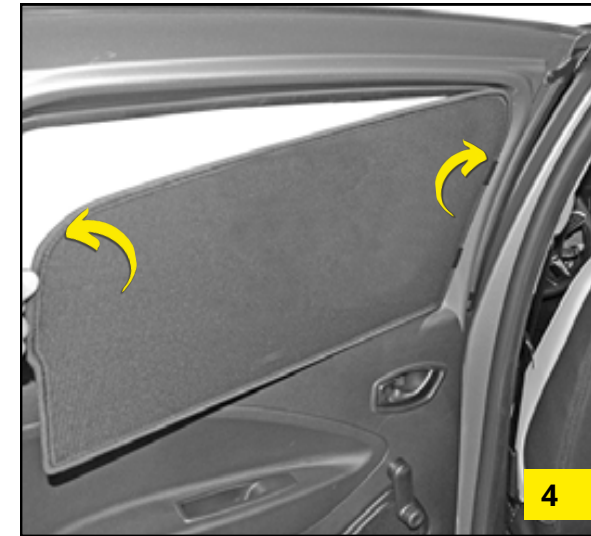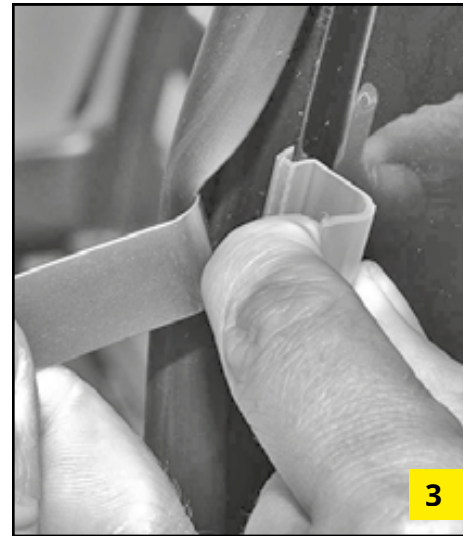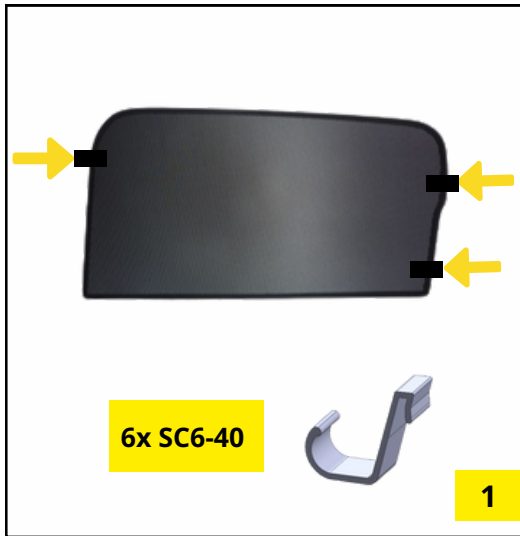

# MONTAGEANLEITUNG

sun-10450ac · Renault Zoe 2013- SunClip Sonnenschutz

