

MONTAGEANLEITUNG

sun-10368abc · Audi Q3 Sportback 2025- SunClip Auto Sonnenschutz

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за събиране

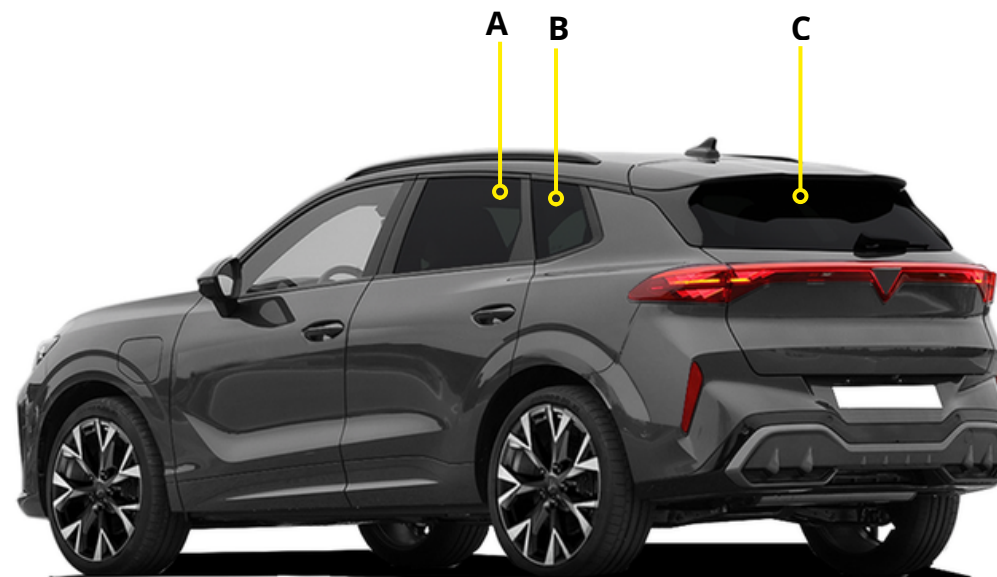

2x A



6x SC4-40



2x B



4x SC8-10




1x C



2x SC8-20



1x

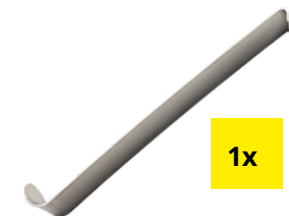


MONTAGEANLEITUNG

sun-10368abc · Audi Q3 Sportback 2025- SunClip Auto Sonnenschutz

2x A



6x SC4-40




1



2



3

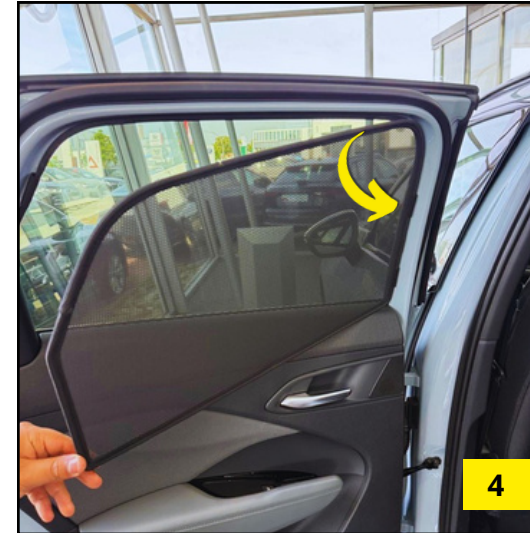


4



5






6

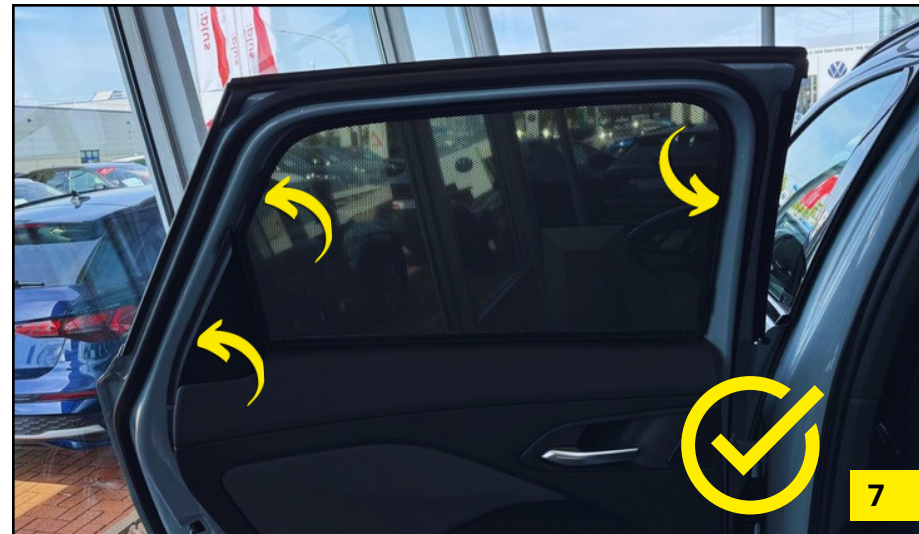

7

MONTAGEANLEITUNG

sun-10368abc · Audi Q3 Sportback 2025- SunClip Auto Sonnenschutz

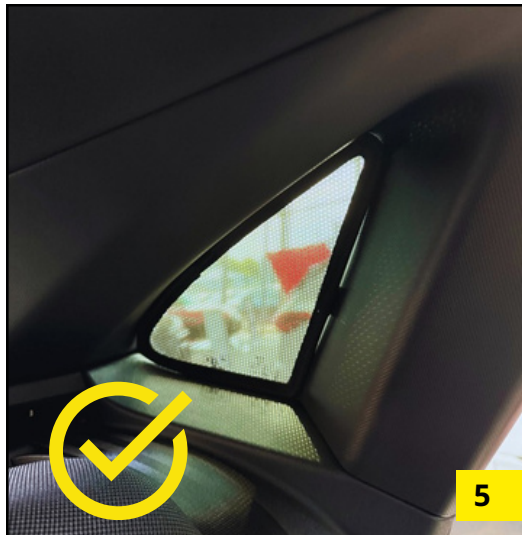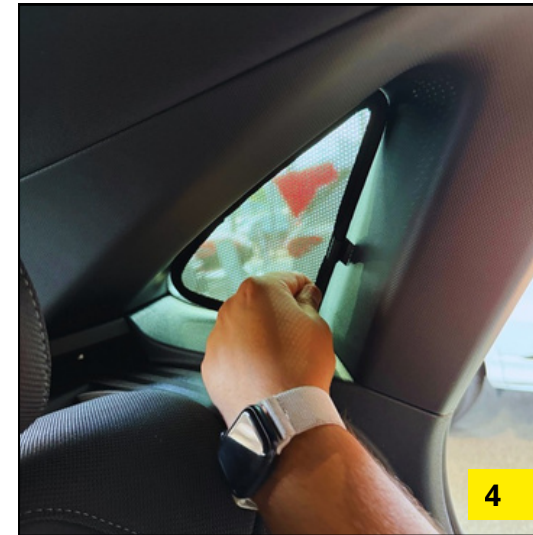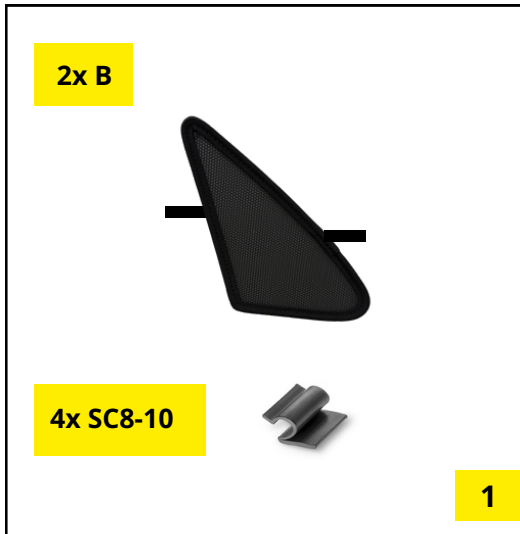

MONTAGEANLEITUNG

sun-10368abc · Audi Q3 Sportback 2025- SunClip Auto Sonnenschutz

