

MONTAGEANLEITUNG

son-10104abc · VW Passat Variant 2014-

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

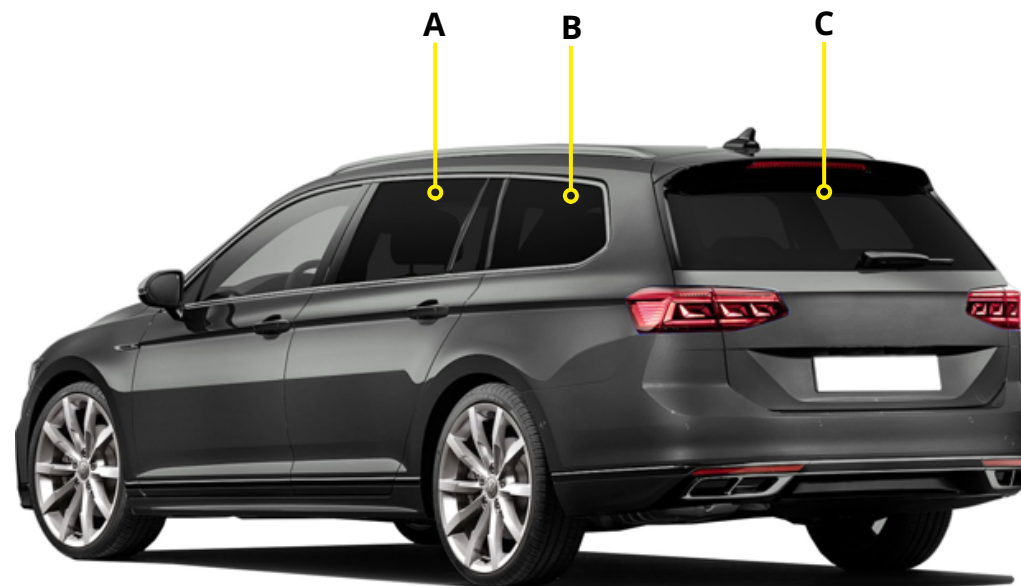


2x A




2x B




1x C



12x SC3-40






2x SC9-20

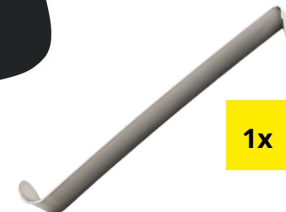

1x


MONTAGEANLEITUNG

son-10104abc · VW Passat Variant 2014-

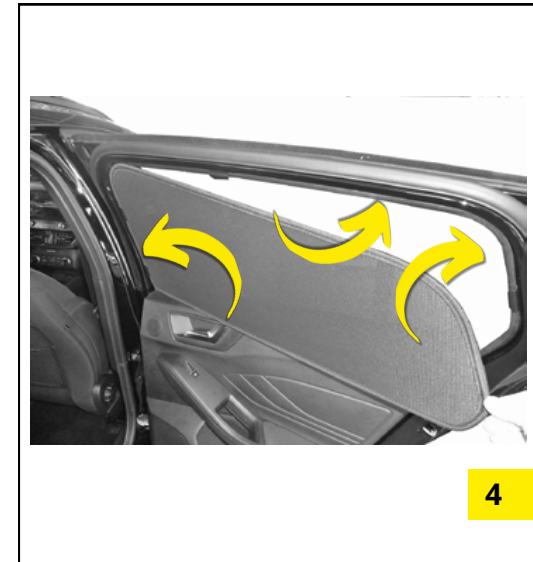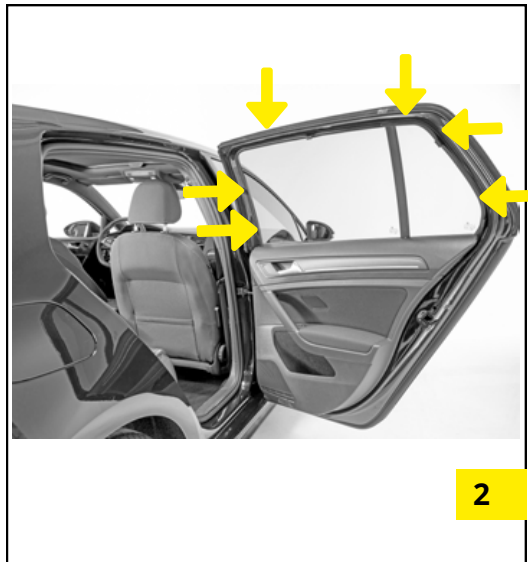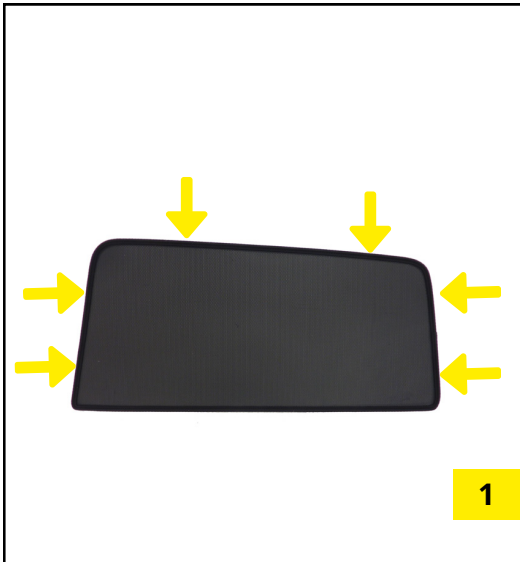

MONTAGEANLEITUNG

son-10104abc · VW Passat Variant 2014-

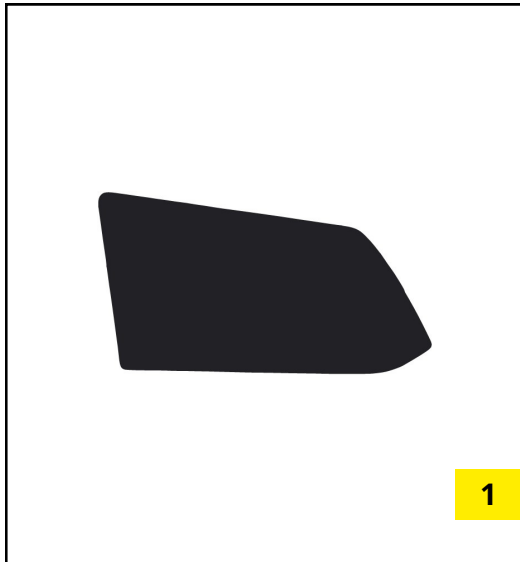

MONTAGEANLEITUNG

son-10104abc · VW Passat Variant 2014-

