

MONTAGEANLEITUNG

sun-10426abc · BMW 2 Active Tourer (U06) 2022-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване

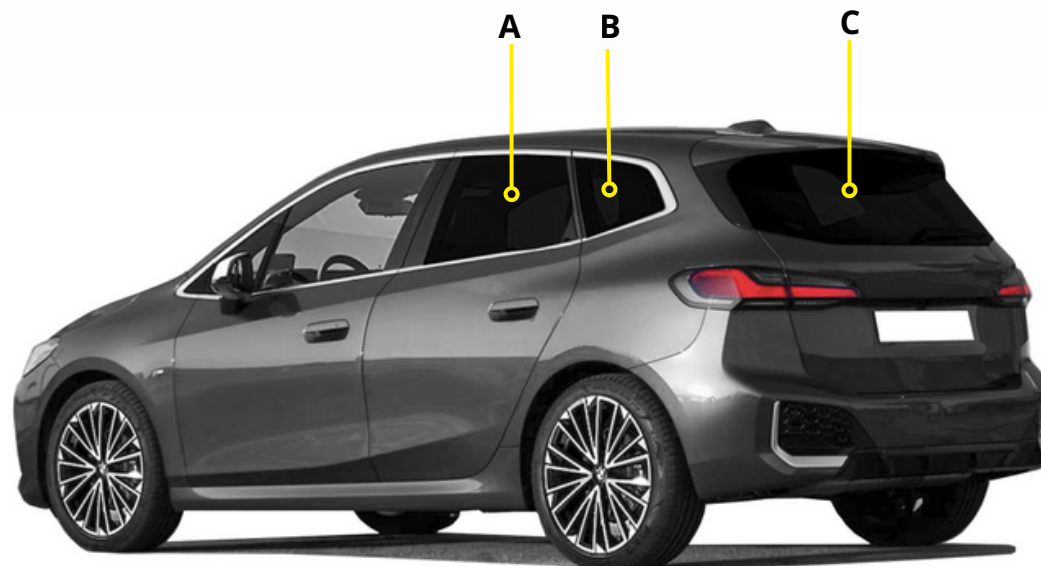

2x A-Blende




8x Klebeclip KC1



2x B-Blende



4x SC8-20



1x C-Blende





2x SC8-20



1x

MONTAGEANLEITUNG

sun-10426abc · BMW 2 Active Tourer (U06) 2022-

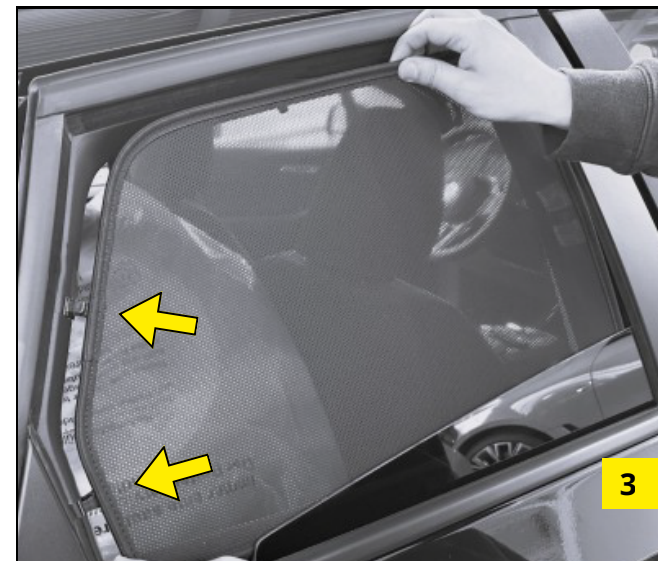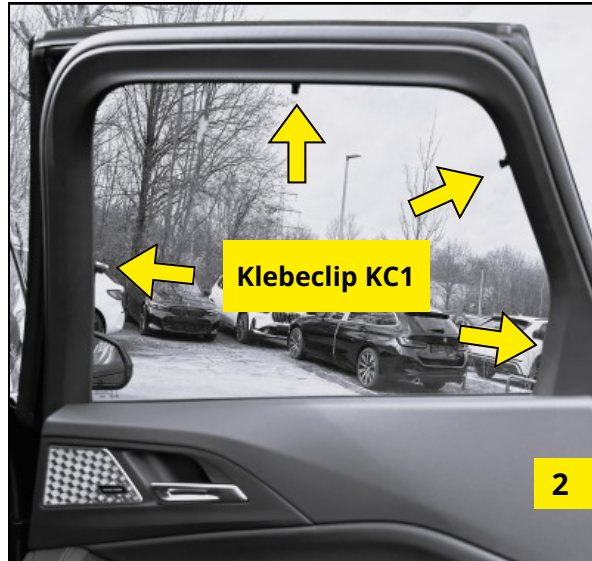


MONTAGEANLEITUNG

sun-10426abc · BMW 2 Active Tourer (U06) 2022-


2x B-Blende




4x SC8-20



1

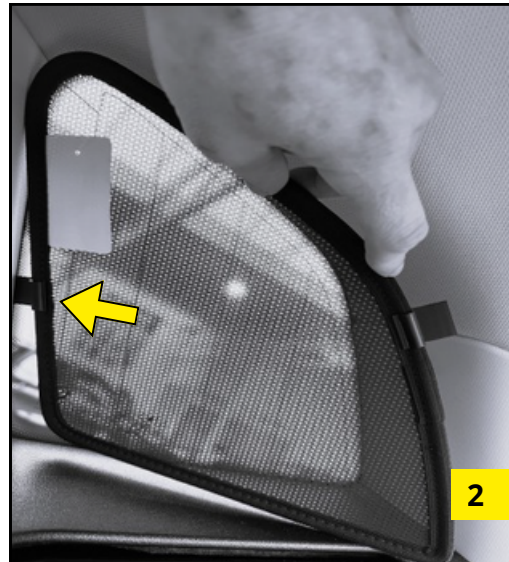

2

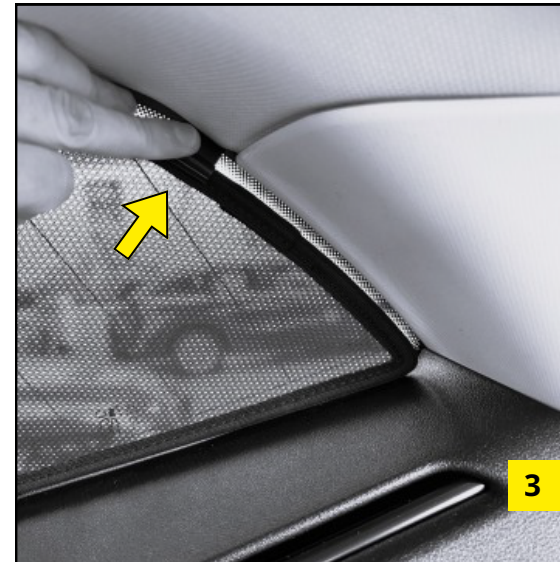

3



4

MONTAGEANLEITUNG

sun-10426abc · BMW 2 Active Tourer (U06) 2022-

