


Sonniboy BMW 3er E91 Touring, 2005-2012
0078234ABC

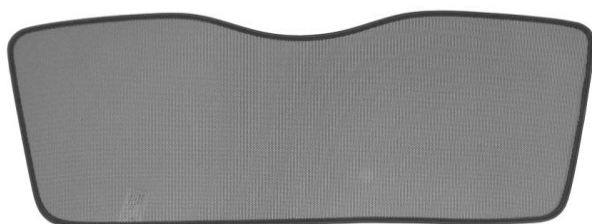

A

↓ 1x



B

↓ 2x





C





↓ 1x






D


↓ 2x

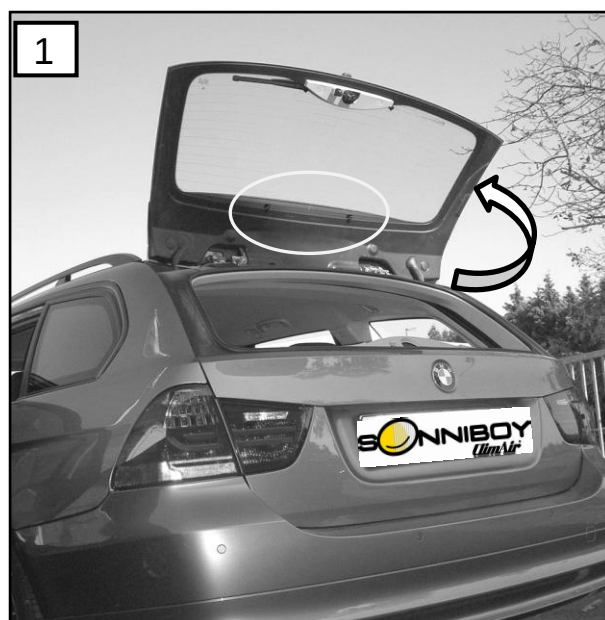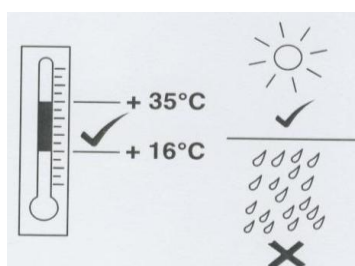

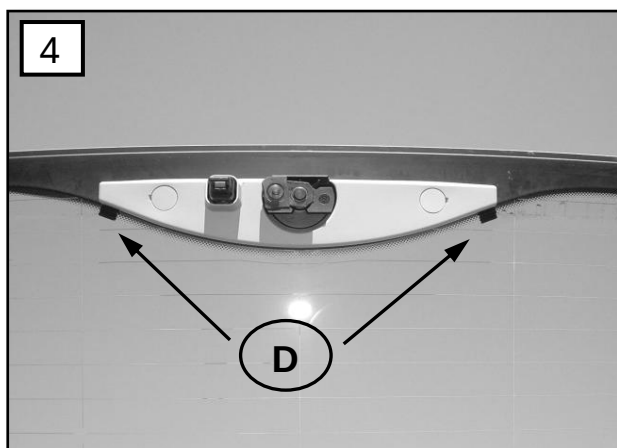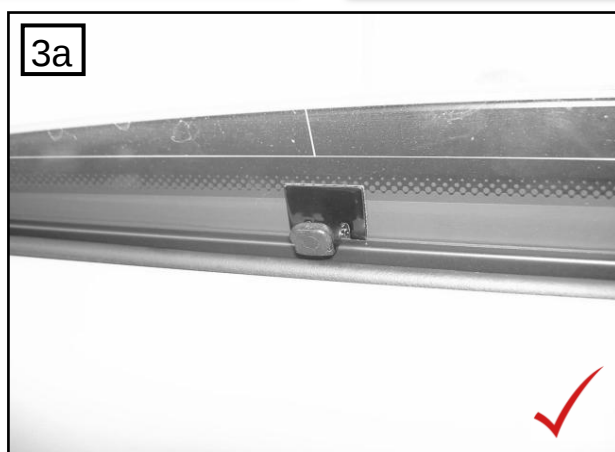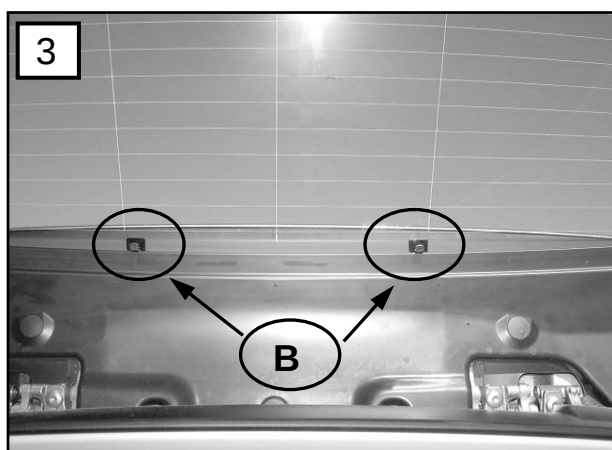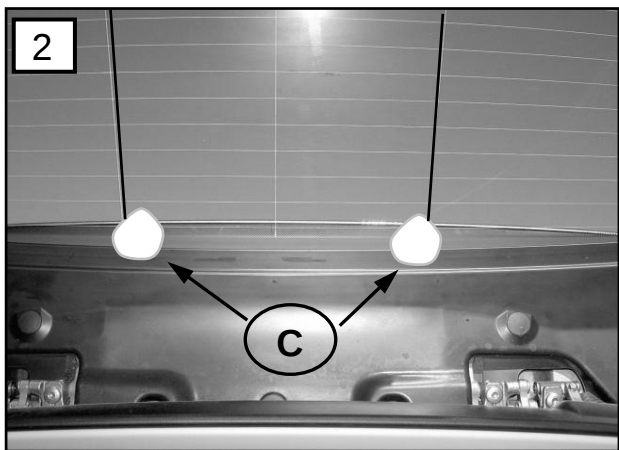

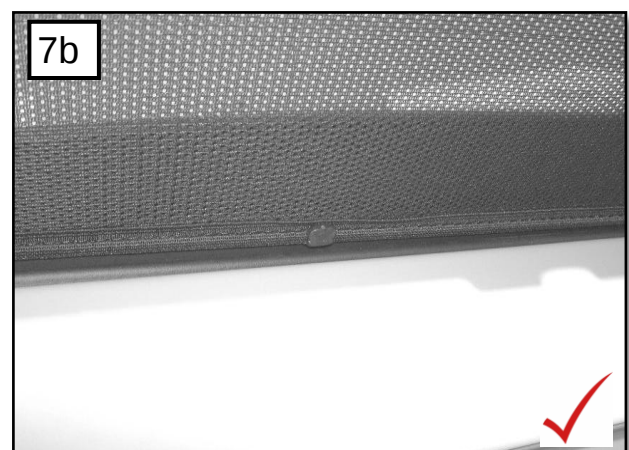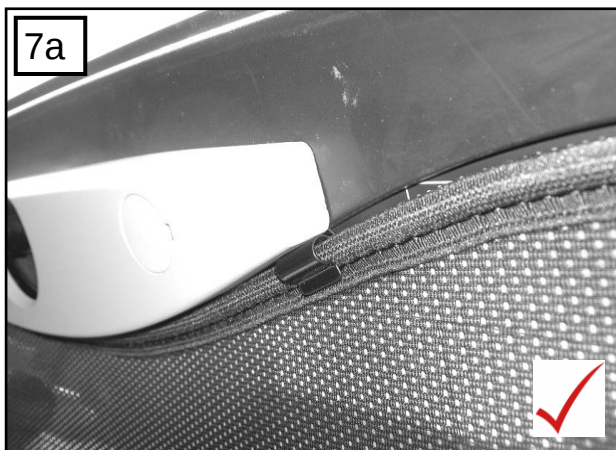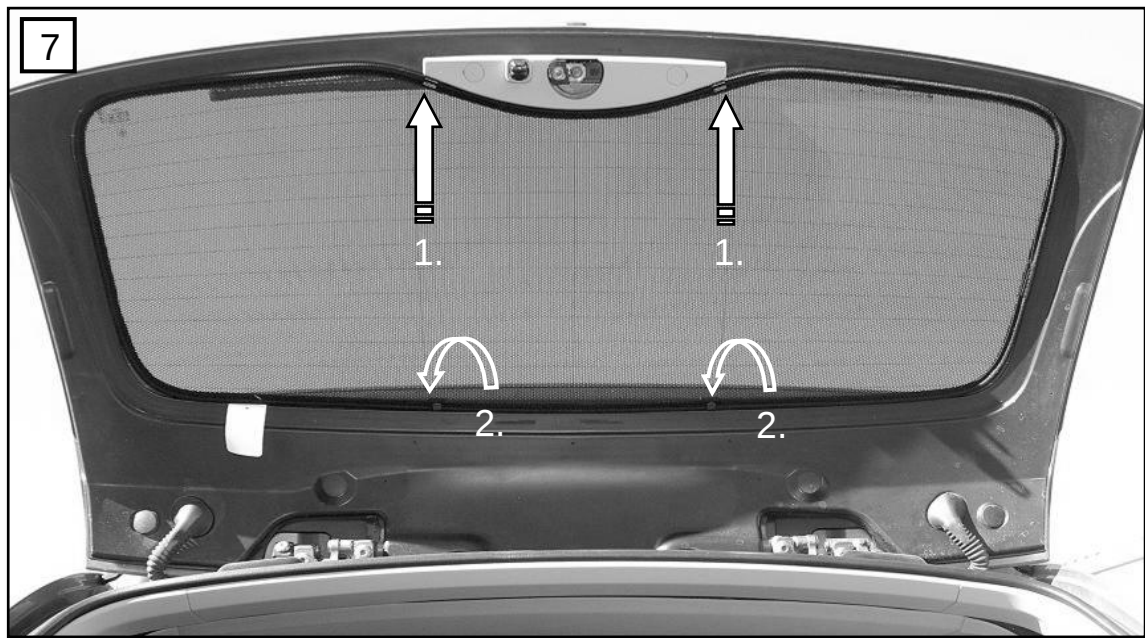




E
↓ 2x



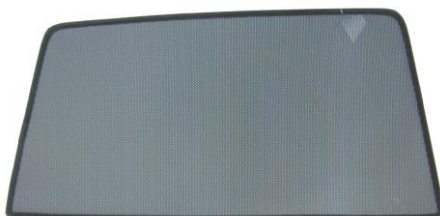




F
↓ 6x



C
↓ 1x

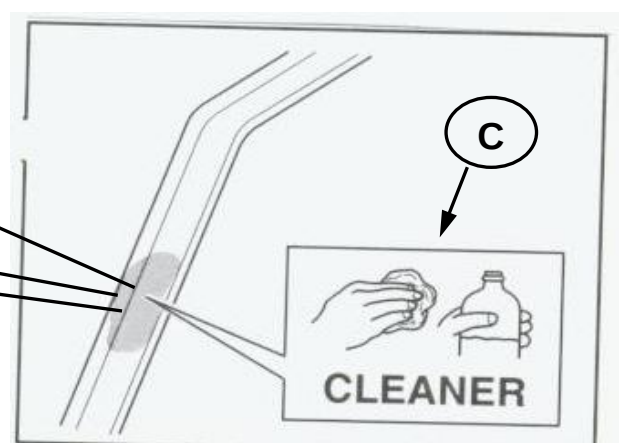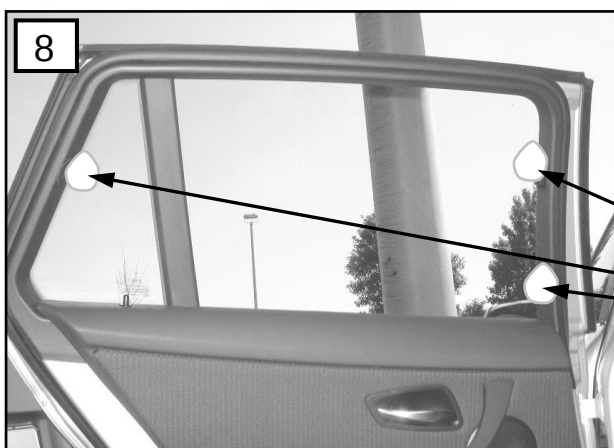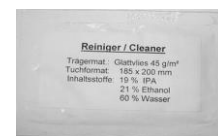


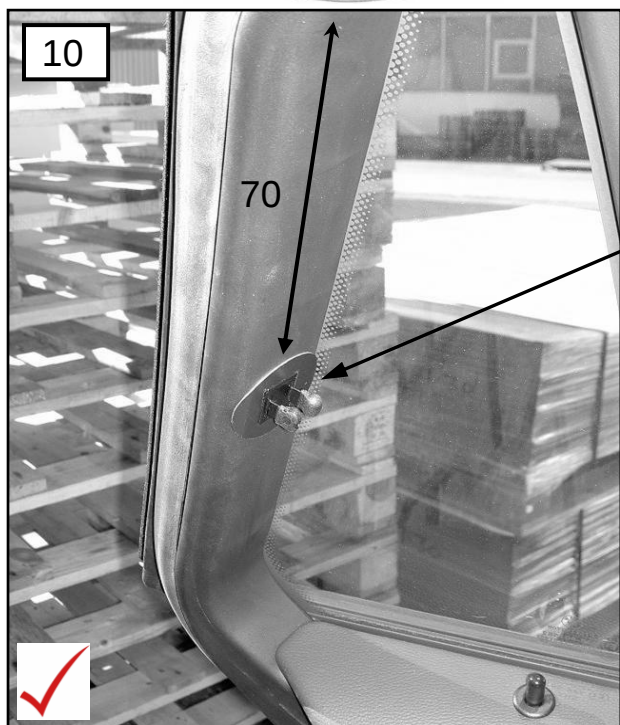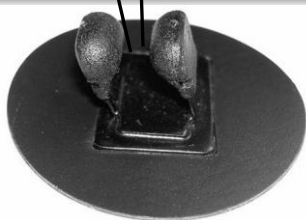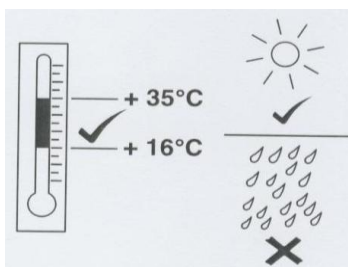

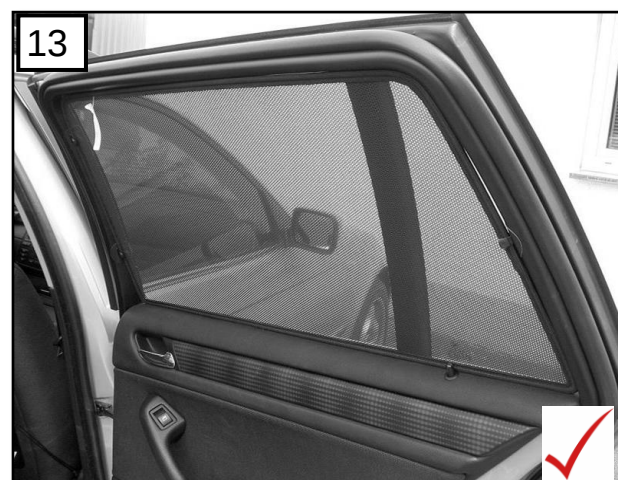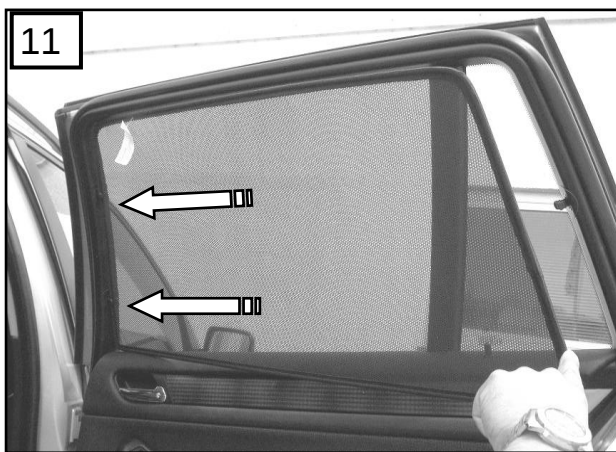

G

2x

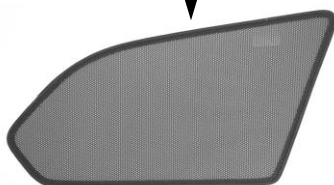


H

4x



14

H

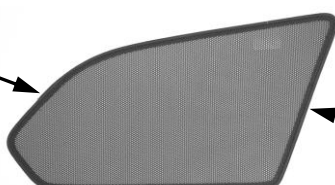

H



