

MONTAGEANLEITUNG

sun-10336abc- Mercedes C-Klasse T-Modell 2007-2015

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje

CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване




2x A

2x B

1x C

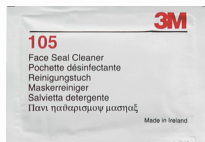

6x KC1



2x SC8-20



2x SC8-10








2x SC8-20




MONTAGEANLEITUNG

sun-10336abc- Mercedes C-Klasse T-Modell 2007-2015

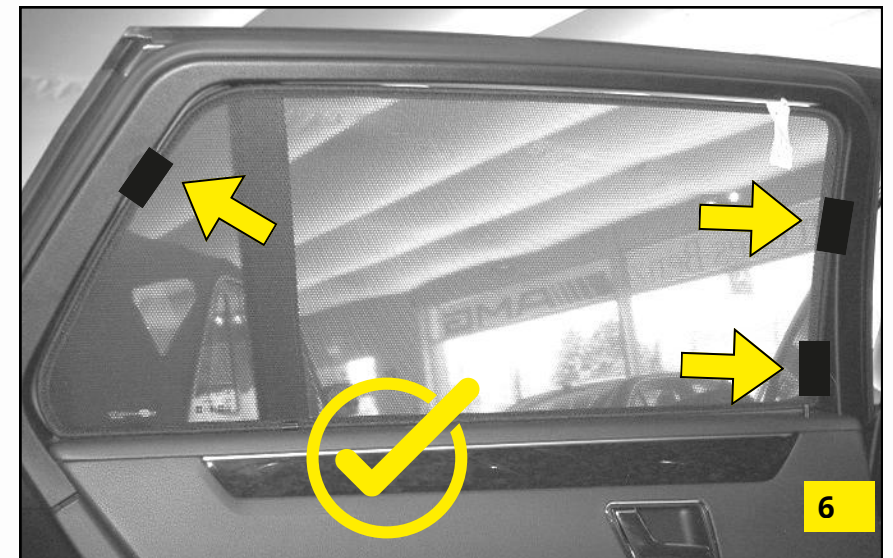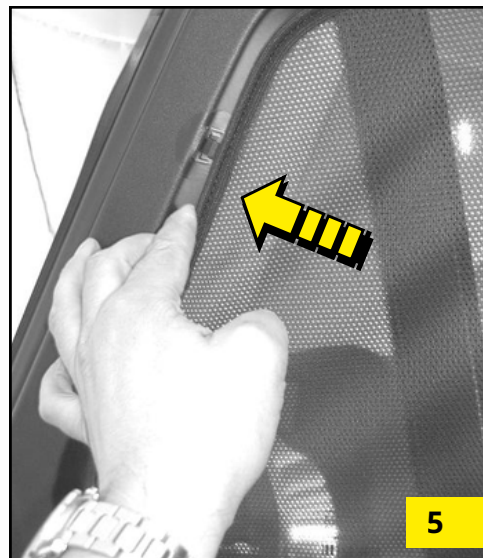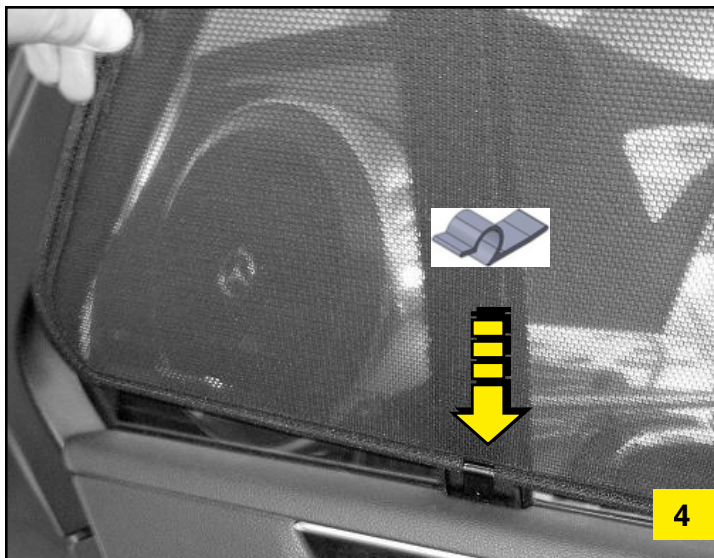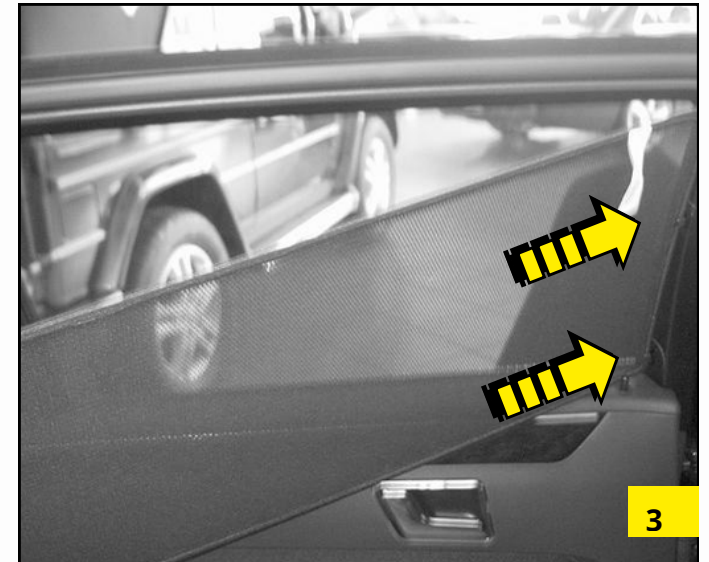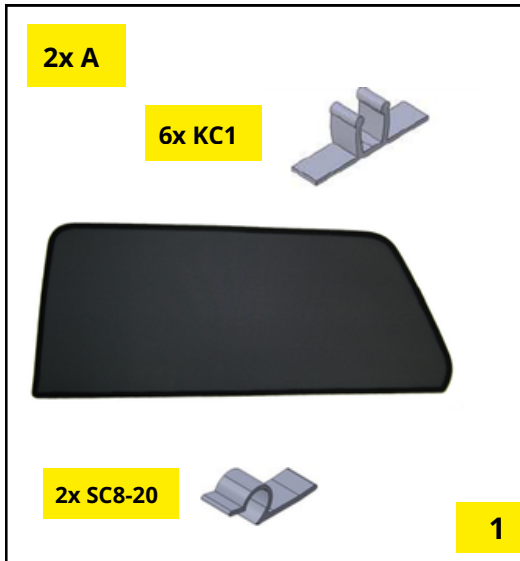

MONTAGEANLEITUNG

sun-10336abc- Mercedes C-Klasse T-Modell 2007-2015

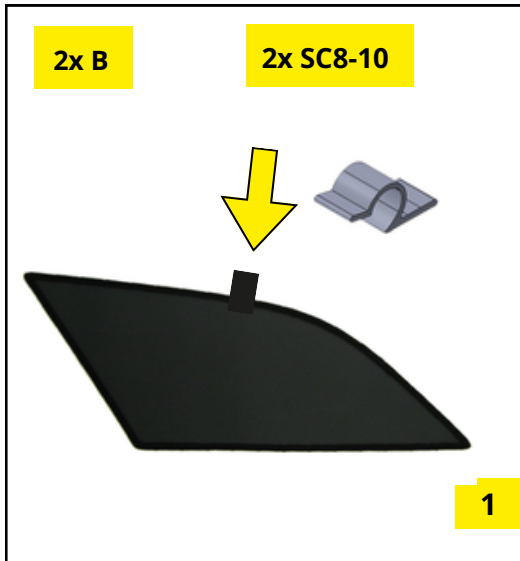

MONTAGEANLEITUNG

sun-10336abc- Mercedes C-Klasse T-Modell 2007-2015

1x C

