

MONTAGEANLEITUNG

sun-10333abc- BMW 3er Touring G21 2019-

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

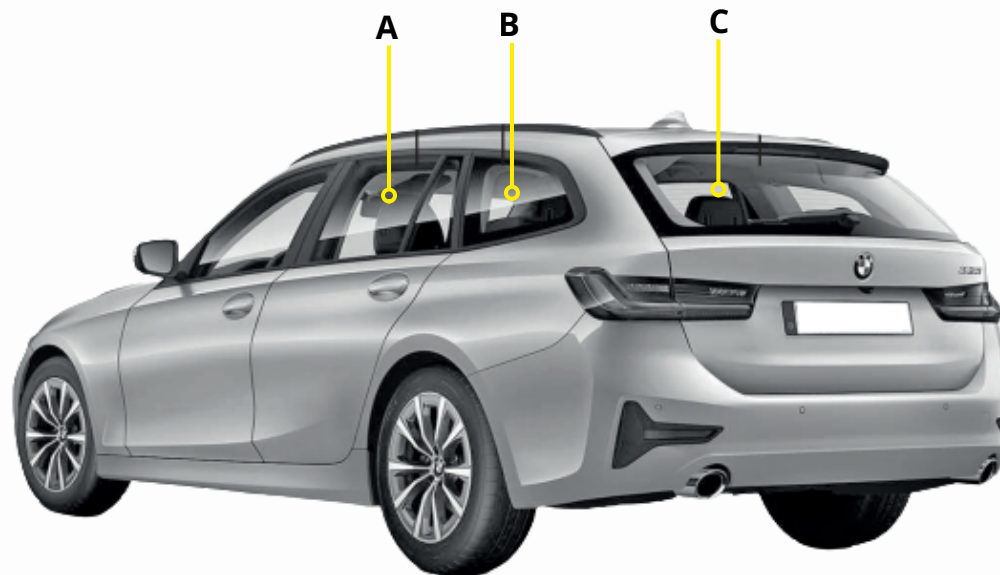

2x A



2x B



1x C



2 x



336

2 x



337

4 x






363



1 x



MONTAGEANLEITUNG

sun-10333abc- BMW 3er Touring G21 2019-

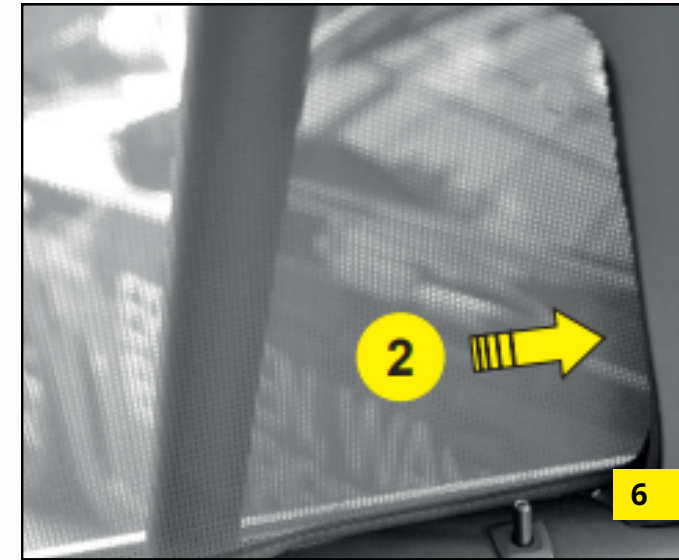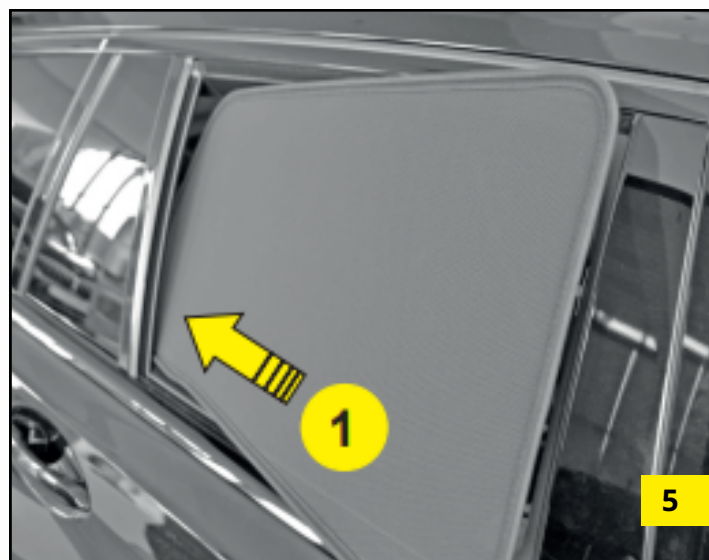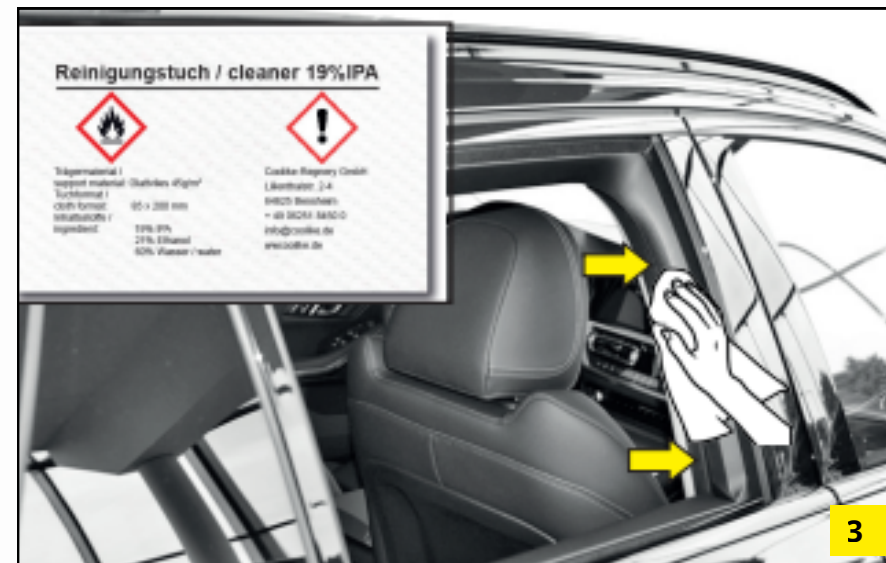


MONTAGEANLEITUNG

sun-10333abc- BMW 3er Touring G21 2019-

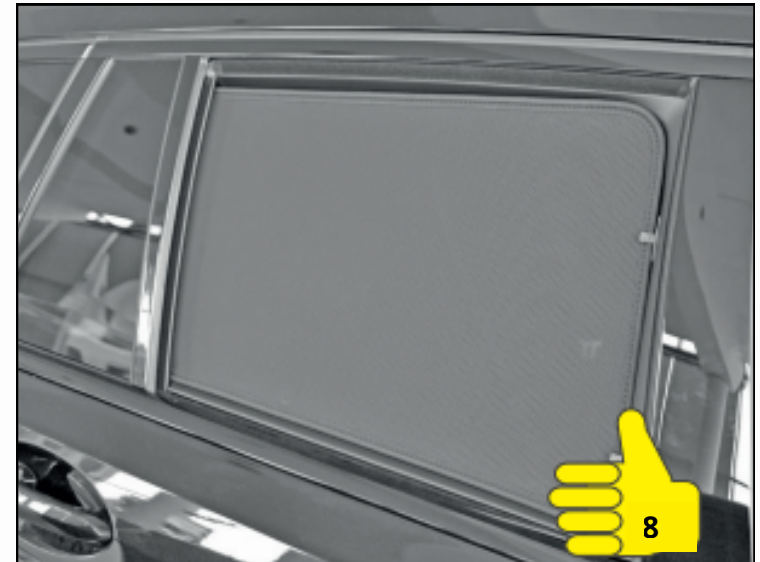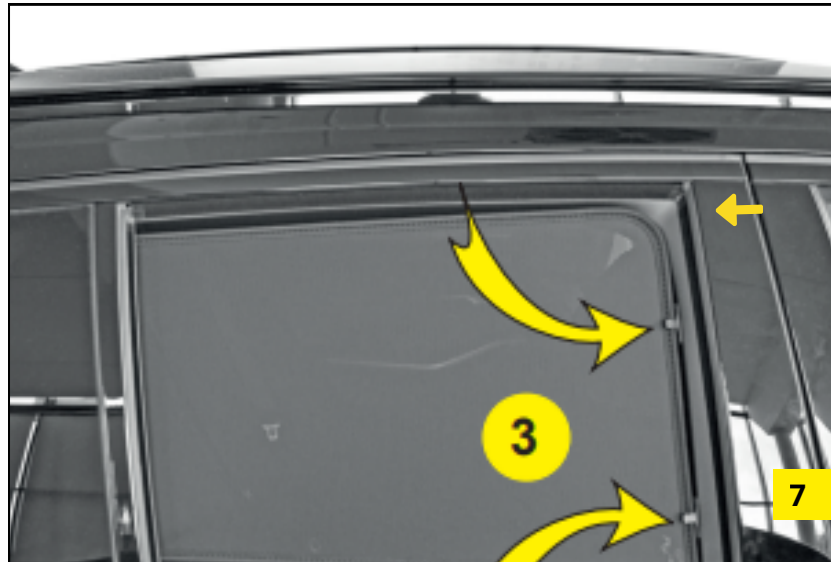




MONTAGEANLEITUNG

sun-10333abc- BMW 3er Touring G21 2019-

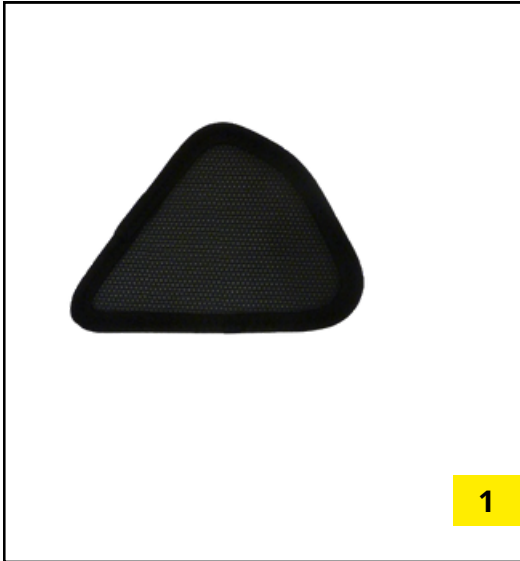

MONTAGEANLEITUNG

sun-10333abc- BMW 3er Touring G21 2019-

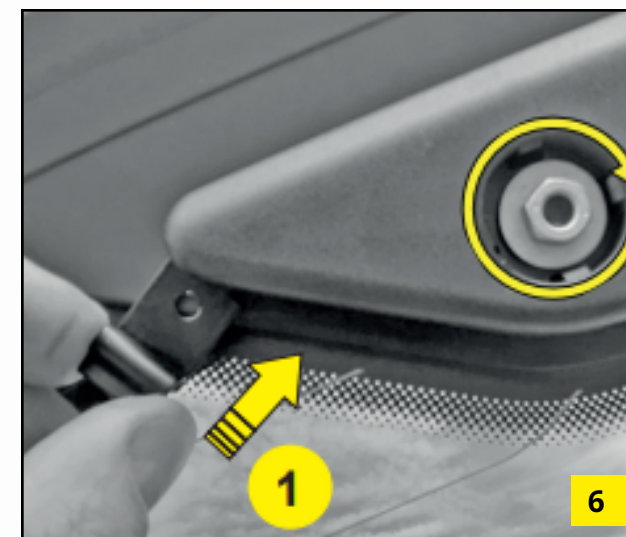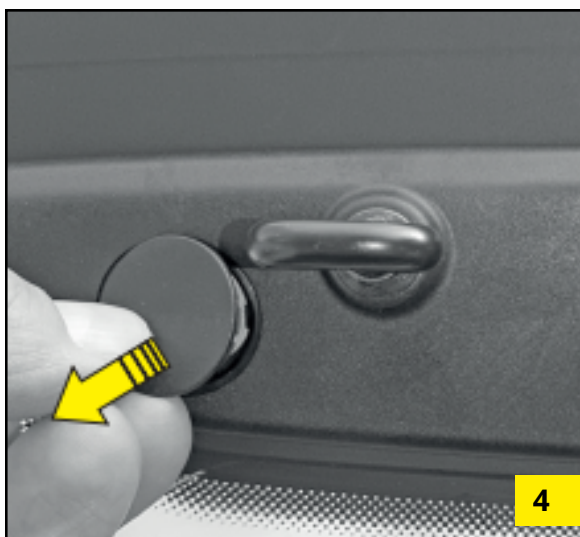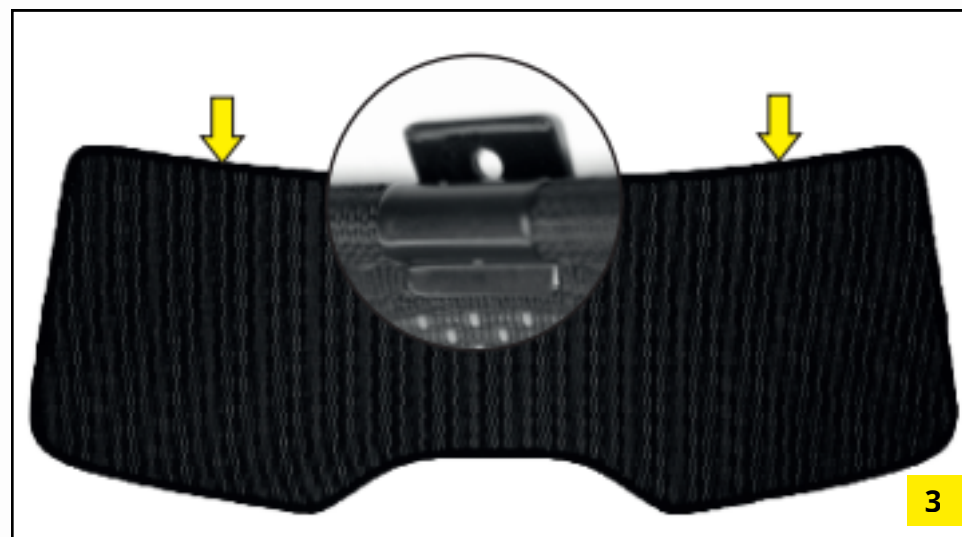

MONTAGEANLEITUNG

sun-10333abc- BMW 3er Touring G21 2019-

