

# MONTAGEANLEITUNG

sun-10505pd-fo · Ford Tourneo Connect Sonnenschutz Panoramadach ab Bj.2022-



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató

CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване




x PD



4x SC9-20

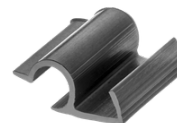

4x SC10-20



1x



# MONTAGEANLEITUNG

sun-10505pd-fo · Ford Tourneo Connect Sonnenschutz Panoramadach ab Bj.2022-

