

MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

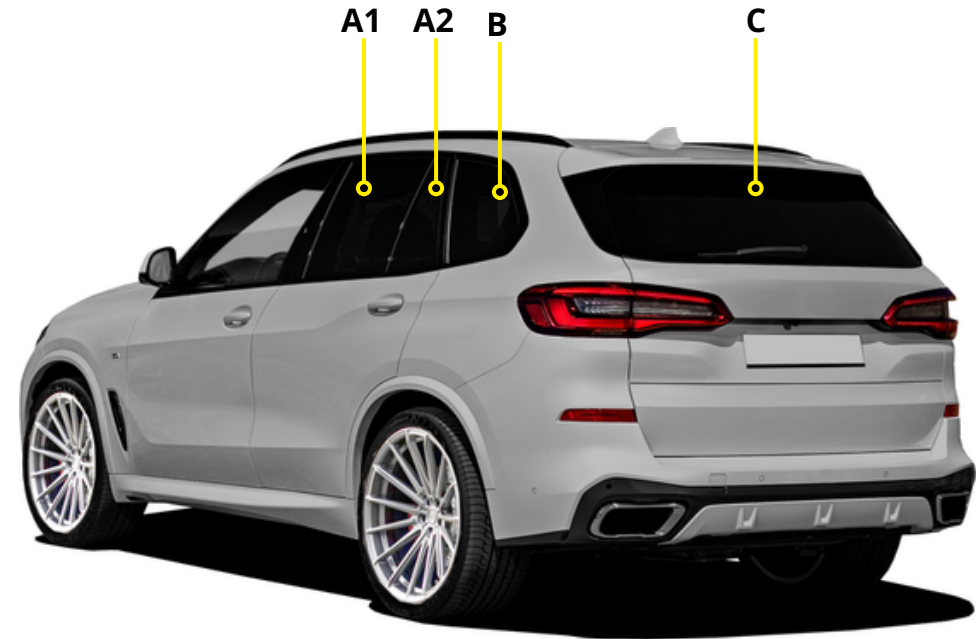

2x A1



2x A2




2x B




1x C




1x

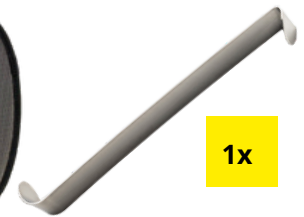


4x SC28



4x SC12-40



2x SC8-20







2x SC8-20





MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

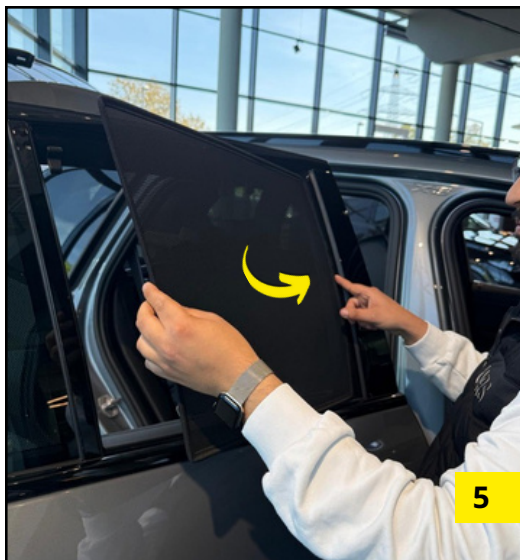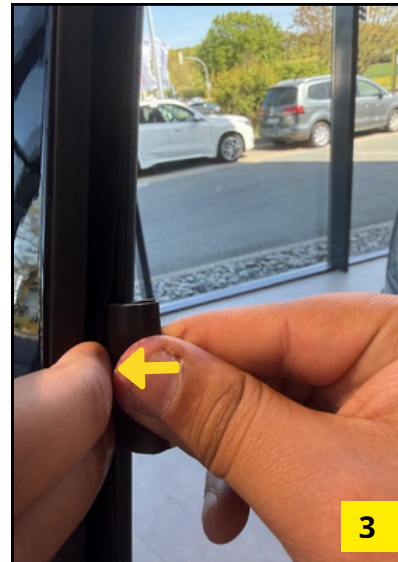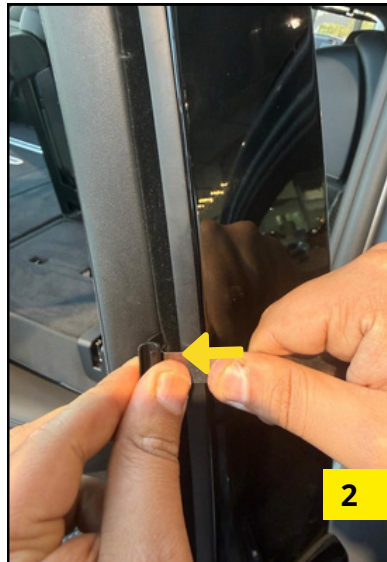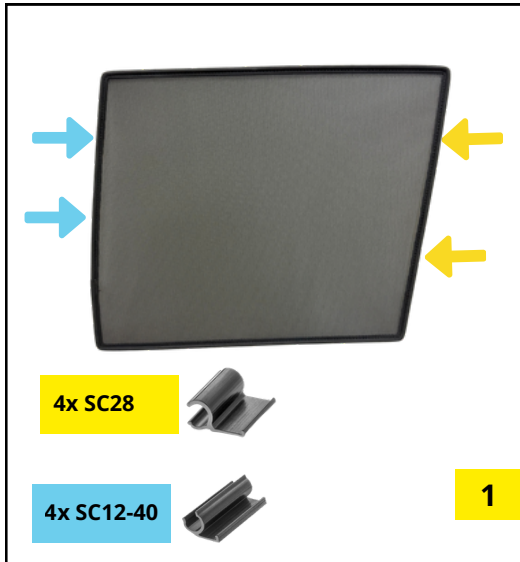

MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

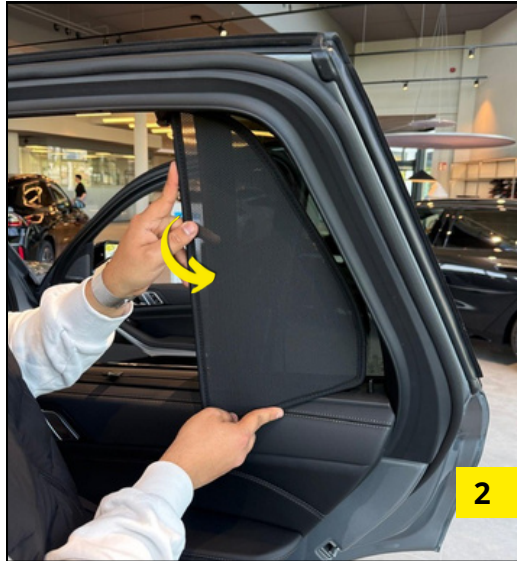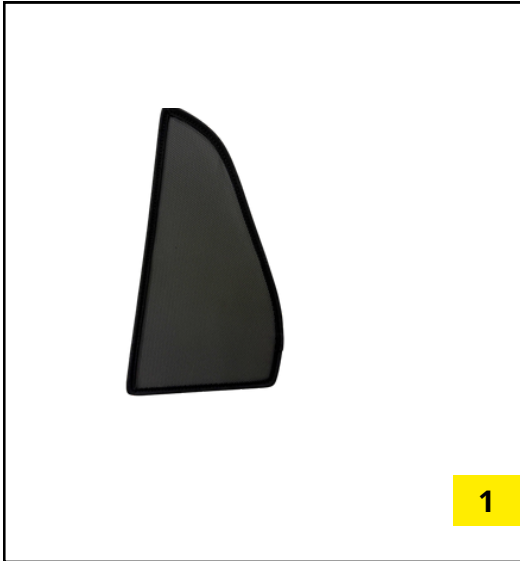

MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz



MONTAGEANLEITUNG

sun-10496abc · BMW X5, 2018- SunClip Sonnenschutz

