

MONTAGEANLEITUNG

sun-10420abc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

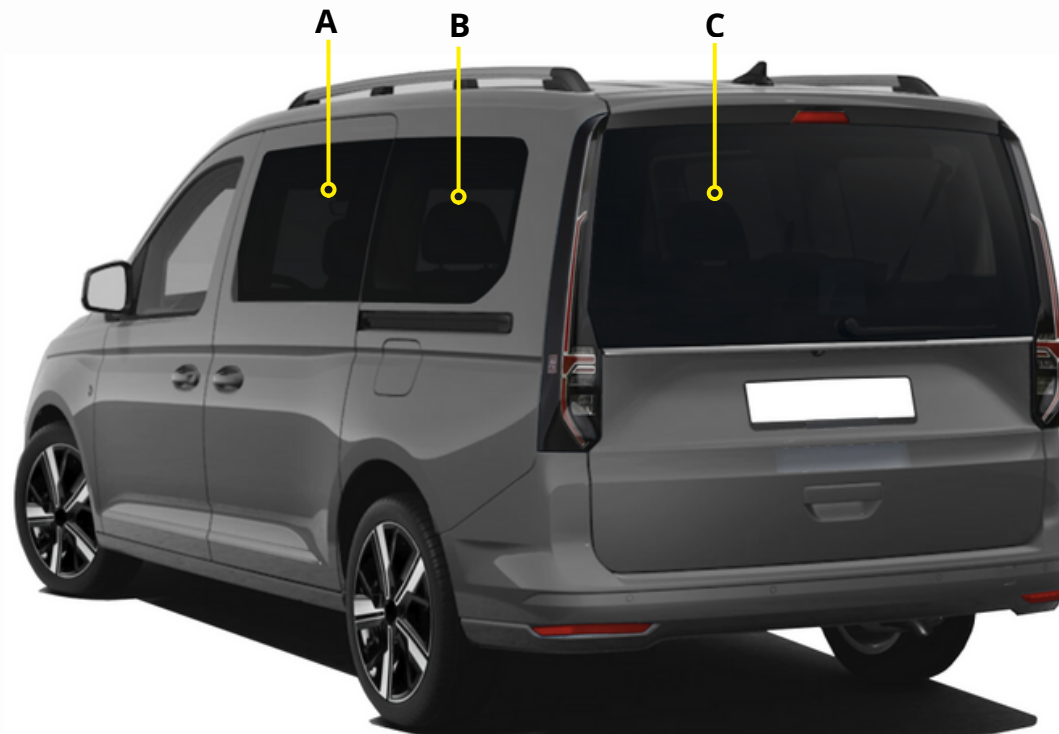


2x A-Blende




8x SC8-20



2x B-Blende

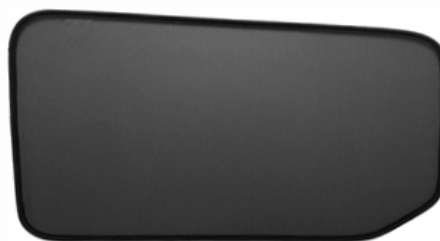

6x SC8-20



1x C-Blende



1x SC9-20



6x SC7-20




1x



MONTAGEANLEITUNG

sun-10420abc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-




2x A-Blende

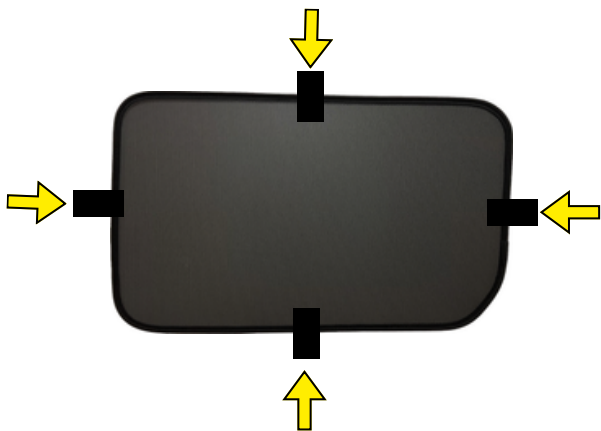

8x SC20-20

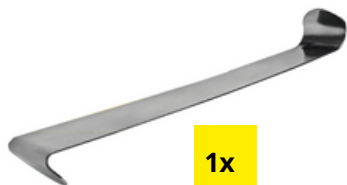


1x

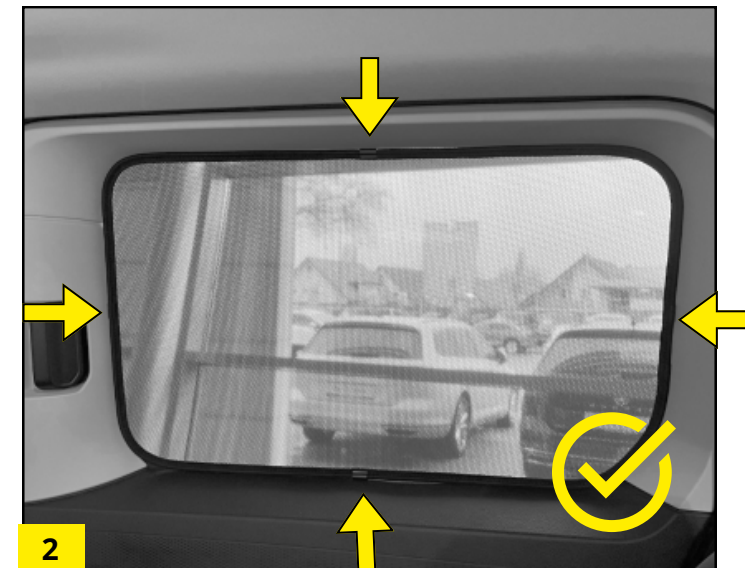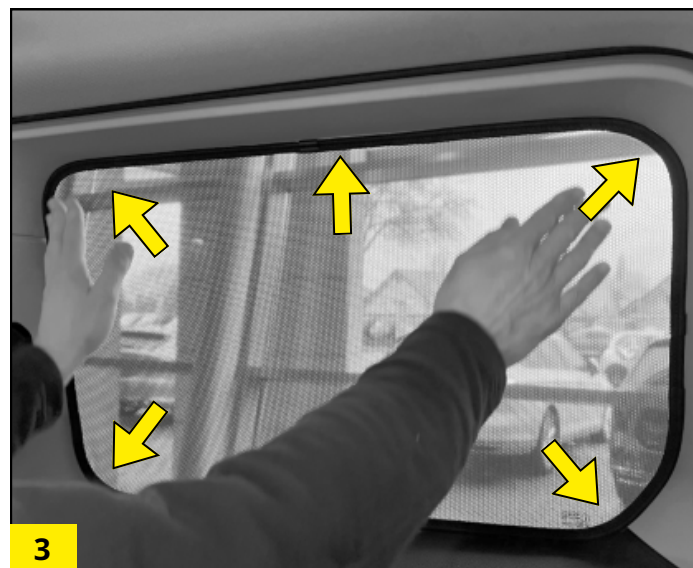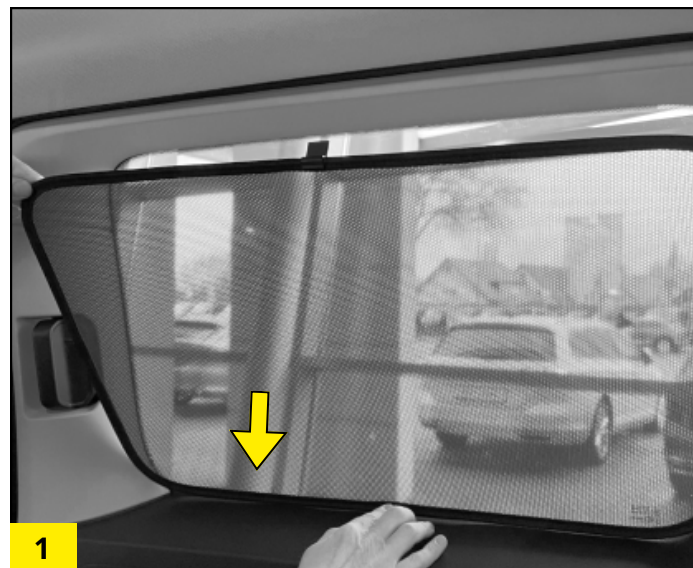


MONTAGEANLEITUNG

sun-10420abc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-

2x B-Blende

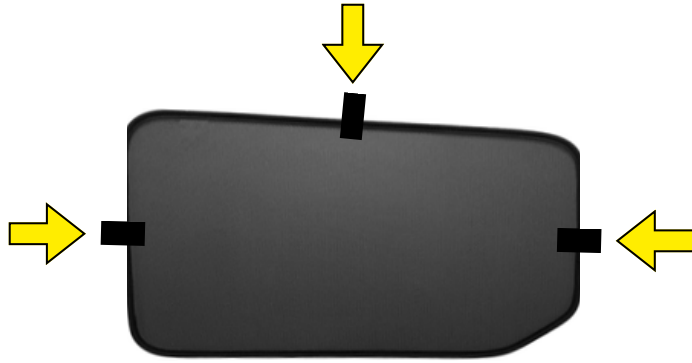


6x SC8-20



MONTAGEANLEITUNG

sun-10420abc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-

1x C-Blende

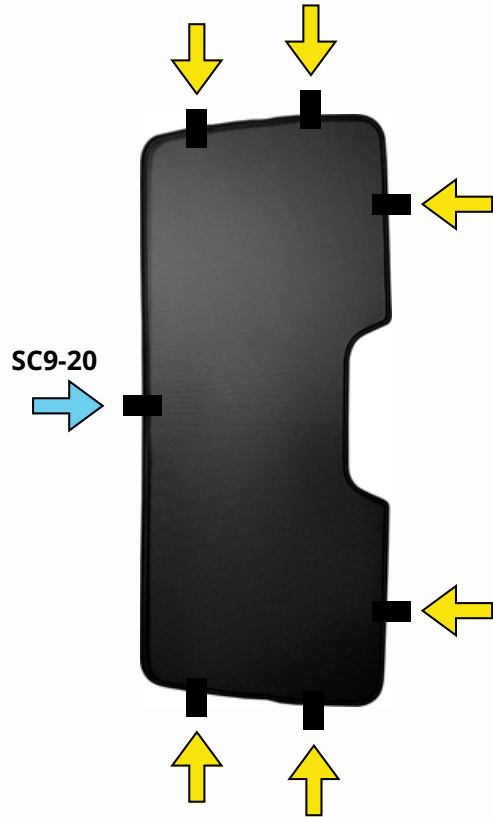

6x SC7-20



1x SC9-20

