

# MONTAGEANLEITUNG

sun-10346a2bc · VW Caddy & Ford Tourneo Connect 2020-



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване

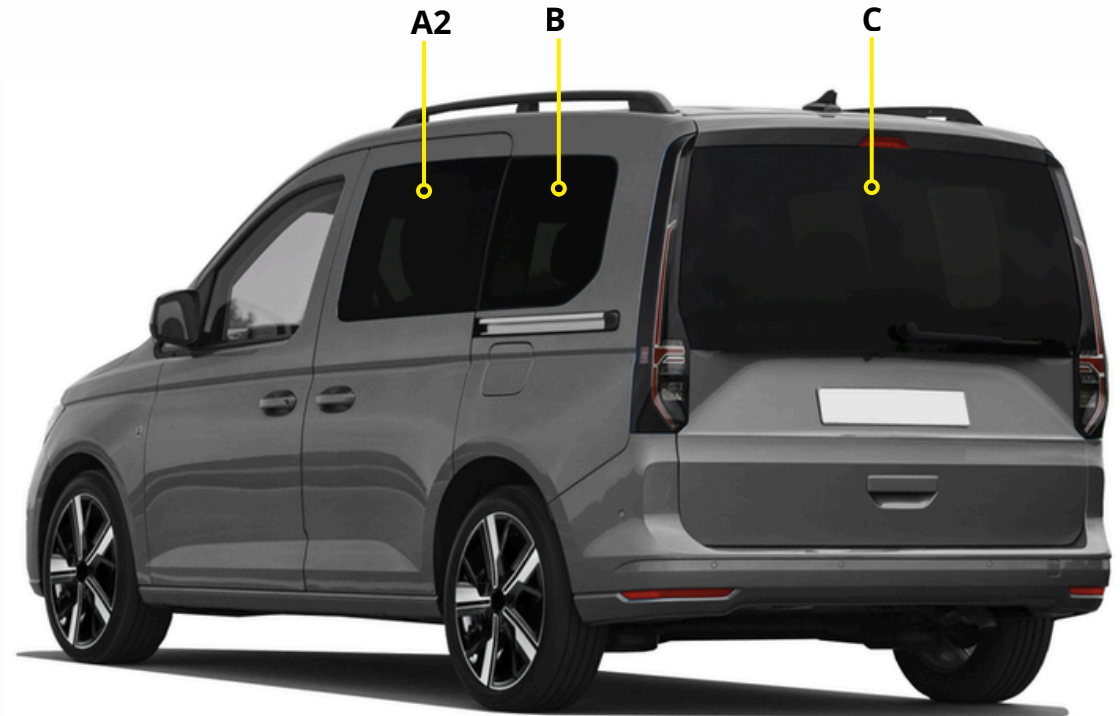

2x A2-Blende



6x SC25



2x B-Blende




4x SC8-20



1x C-Blende



1x SC9-20



6x SC7-20






1x




# MONTAGEANLEITUNG

sun-10346a2bc · VW Caddy & Ford Tourneo Connect 2020-

2x A-Blende

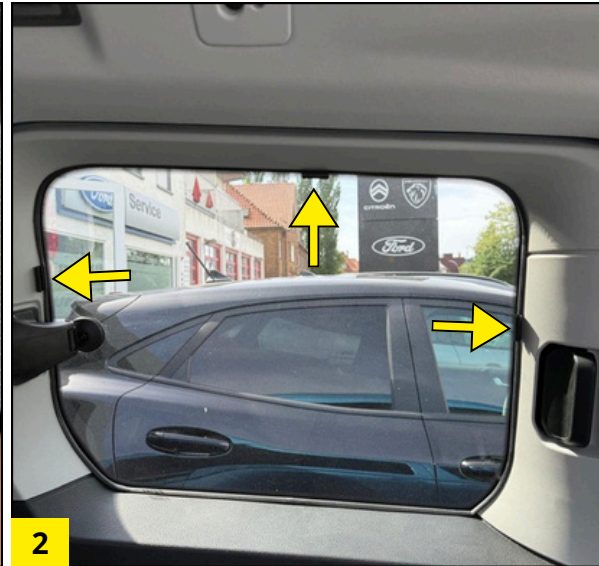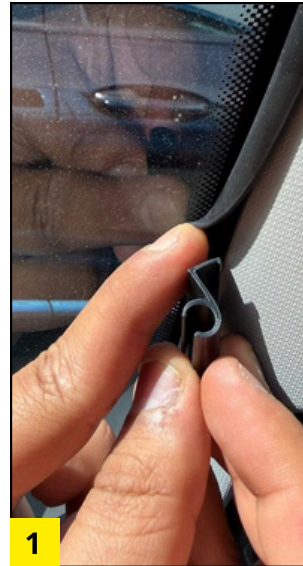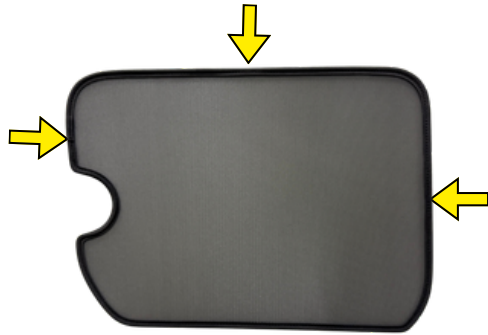


6x SC25

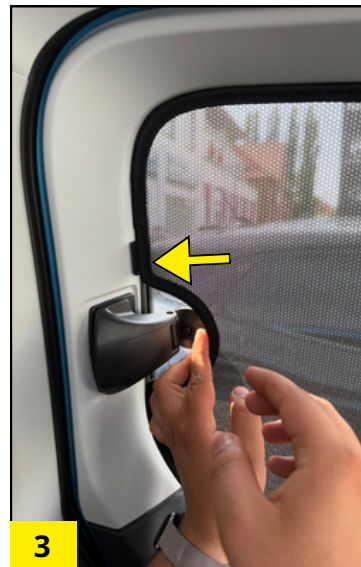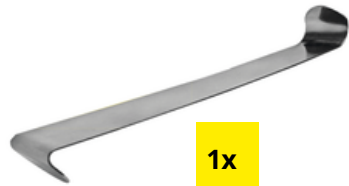


# MONTAGEANLEITUNG

sun-10346a2bc · VW Caddy & Ford Tourneo Connect 2020-

2x B-Blende

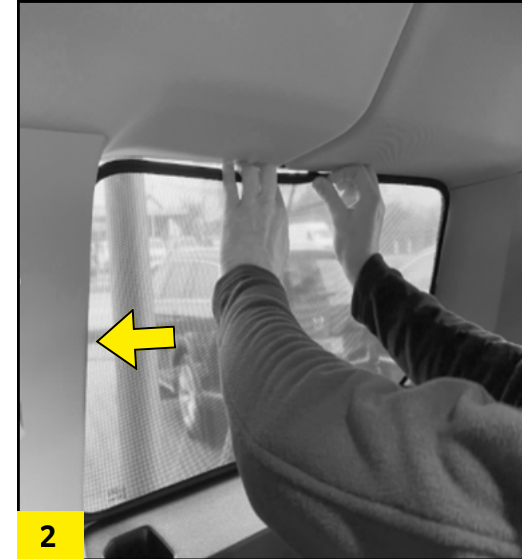


4x SC8-20

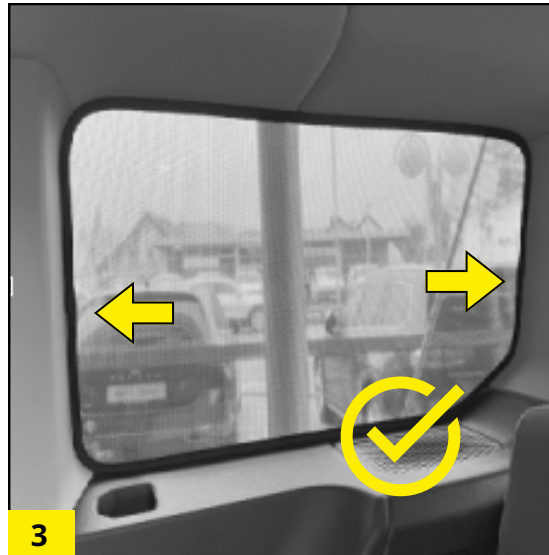


# MONTAGEANLEITUNG

sun-10346a2bc · VW Caddy & Ford Tourneo Connect 2020-

1x C-Blende

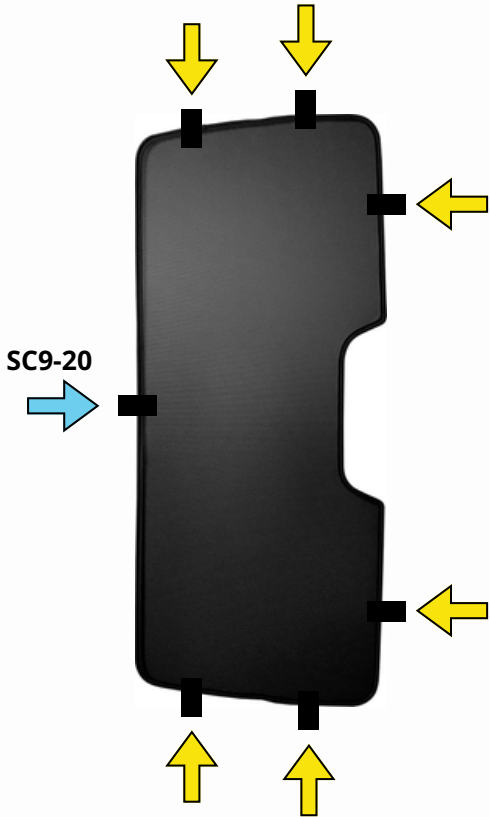

6x SC7-20



1x SC9-20

