

MONTAGEANLEITUNG

sun-10436abc · Audi Q5 2008-2015 SunClip Sonnenschutz

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos


BG: Инструкции за сглобяване

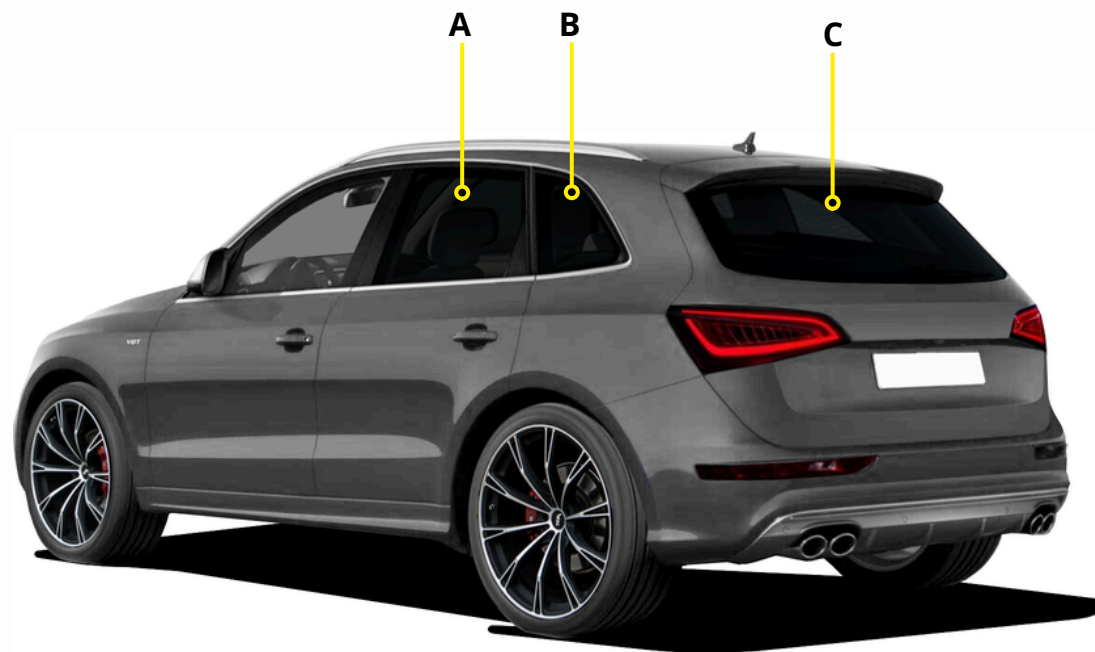


2x A

2x B

1x C

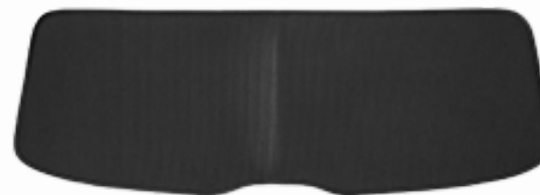

8x SC1-50

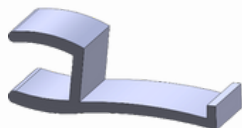


2x SC9-20



1x



MONTAGEANLEITUNG

sun-10436abc · Audi Q5 2008-2015 SunClip Sonnenschutz

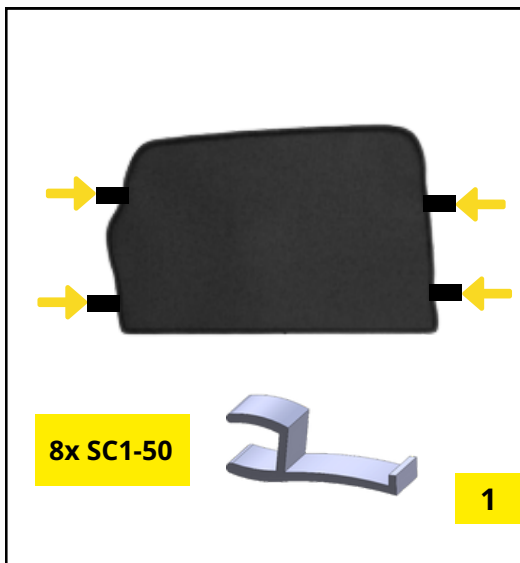

MONTAGEANLEITUNG

sun-10436abc · Audi Q5 2008-2015 SunClip Sonnenschutz

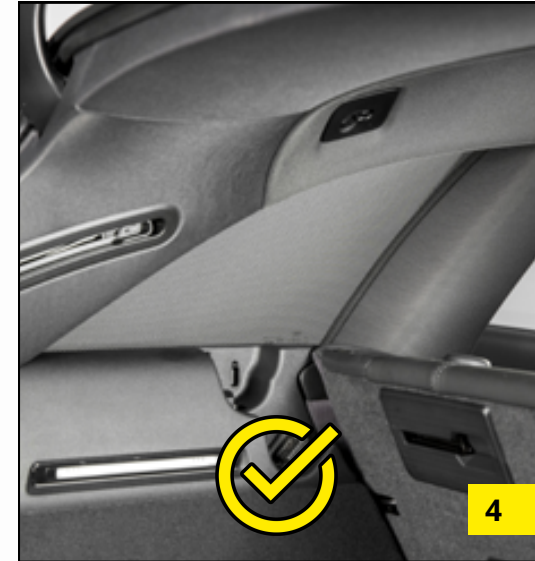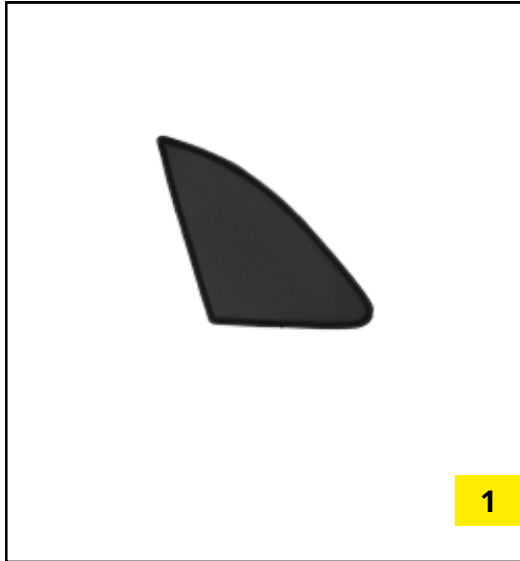

MONTAGEANLEITUNG

sun-10436abc · Audi Q5 2008-2015 SunClip Sonnenschutz

