


MONTAGEANLEITUNG

sun-10321abc-tp Toyota Proace Verso L2 2020- sun-10321abc-fu Fiat Ulysse 2022- sun-10321abc-cs
Citroen Spacetourer L2 2020- sun-10321-oz Opel Zafira Life L2 2020- / Peugeot Traveller 2020-

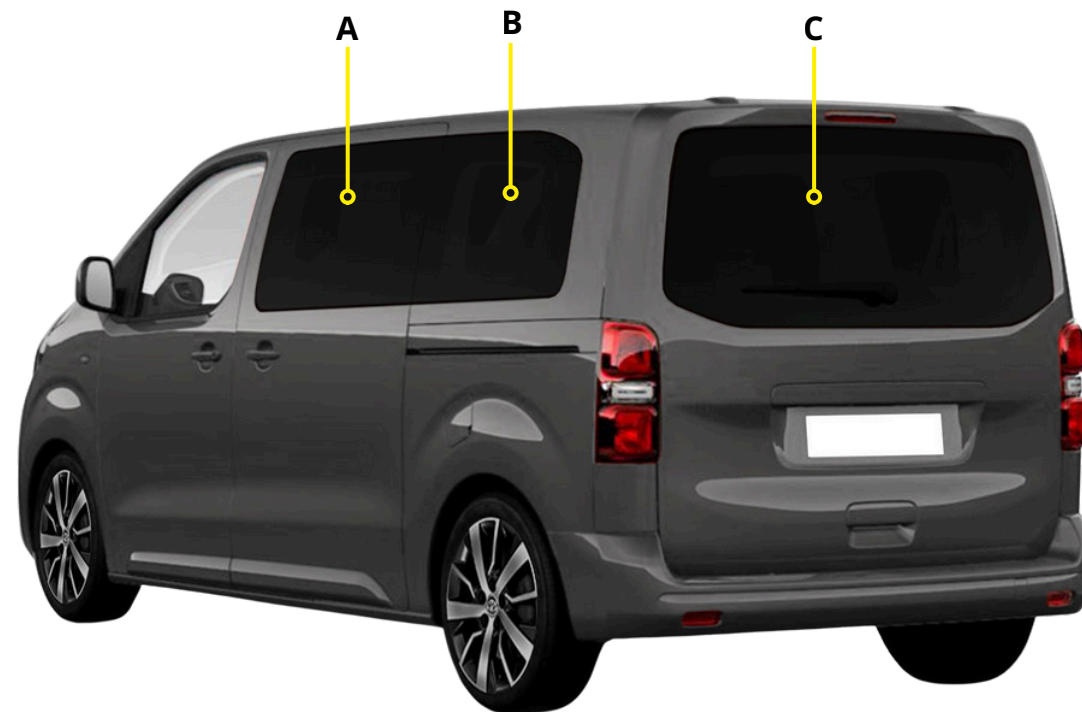

DE: Montageanleitung	MT: Istruzzjonijiet għall-assemblaġġ
EN: Installation instructions	NL: Montagehandleiding
DK: Installationsvejledning til	PL: Instrukcje montażu
EE: Paigaldusjuhised	PT: Instruções de montagem
FI: Paigaldusjuhised	RO: Instrucțiuni de asamblare
FR: Instructions de montage	SE: Monteringsanvisningar
GR: Οδηγίες συναρμολόγησης	SK: Návod na montáž
IE: Treoracha tionóil	SI: Navodila za sestavljanje
IT: Istruzioni di montaggio	ES: Instrucciones de montaje
HR: Összeszerelési útmutató	CZ: Návod k montáži
LV: Montāžas instrukcija	HU: Összeszerelési útmutató
LT: Surinkimo instrukcijos	BG: Инструкции за сглобяване



2x A



2x B




1x C



MONTAGEANLEITUNG

sun-10321abc-tp Toyota Proace Verso L2 2020- sun-10321abc-fu Fiat Ulysse 2022- sun-10321abc-cs
Citroen Spacetourer L2 2020- sun-10321-oz Opel Zafira Life L2 2020- / Peugeot Traveller 2020-

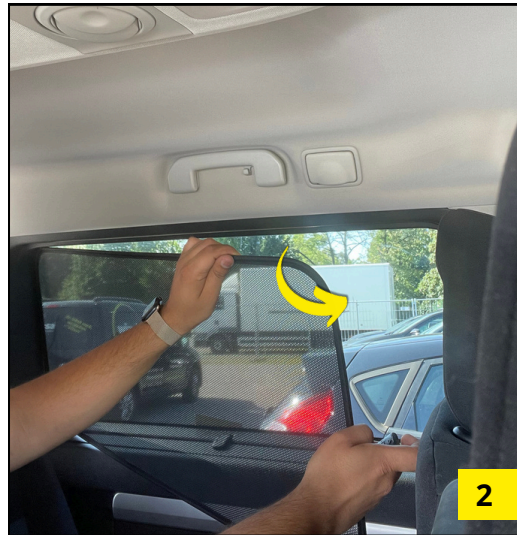

MONTAGEANLEITUNG

sun-10321abc-tp Toyota Proace Verso L2 2020- sun-10321abc-fu Fiat Ulysse 2022- sun-10321abc-cs
Citroen Spacetourer L2 2020- sun-10321-oz Opel Zafira Life L2 2020- / Peugeot Traveller 2020-



MONTAGEANLEITUNG

sun-10321abc-tp Toyota Proace Verso L2 2020- sun-10321abc-fu Fiat Ulysse 2022- sun-10321abc-cs
Citroen Spacetourer L2 2020- sun-10321-oz Opel Zafira Life L2 2020- / Peugeot Traveller 2020-

