


MONTAGEANLEITUNG

sun-10420a2bc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-


DE: Montageanleitung	MT: Istruzioni per l'installazione
EN: Installation instructions	NL: Montagehandleiding
DK: Installationsvejledning til	PL: Instrukcja montażu
EE: Paigaldusjuhised	PT: Instruções de montagem
FI: Paigaldusjuhised	RO: Instrucțiuni de asamblare
FR: Instructions de montage	SE: Monteringsanvisningar
GR: Οδηγίες συναρμολόγησης	SK: Návod na montáž
IE: Treoracha tionóil	SI: Navodila za sestavljanje
IT: Istruzioni di montaggio	ES: Instrucciones de montaje
HR: Upute za sastavljanje	CZ: Návod k montáži
LV: Montāžas instrukcija	HU: Összeszerelési útmutató
LT: Surinkimo instrukcijos	BG: Инструкции за сглобяване

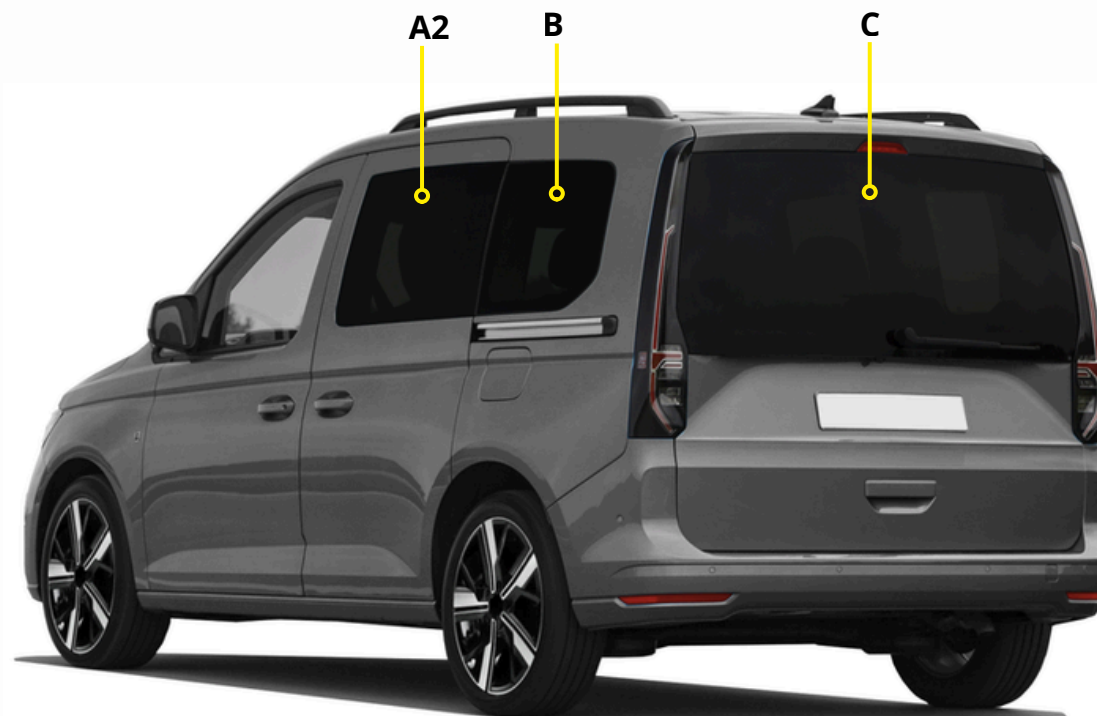

2x A2



6x SC25



2x B




4x SC8-20



1x C



1x SC9-20



6x SC7-20





1x



MONTAGEANLEITUNG

sun-10420a2bc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-

2x A2

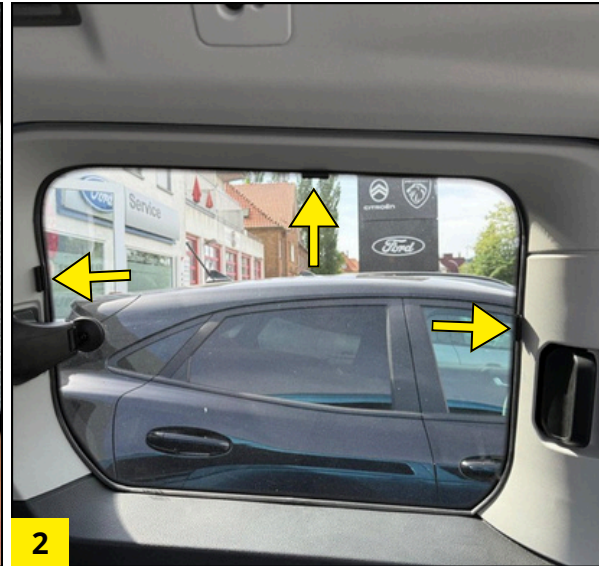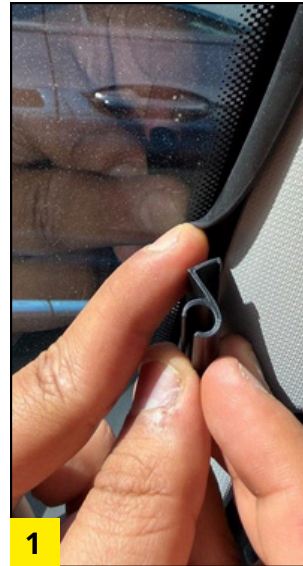

6x SC25

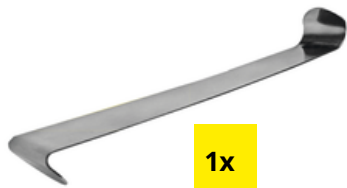

MONTAGEANLEITUNG

sun-10420a2bc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-

2x B



4x SC8-20




MONTAGEANLEITUNG


sun-10420a2bc · VW Caddy Maxi & Ford Grand Tourneo Connect 2020-

1x C

SC9-20

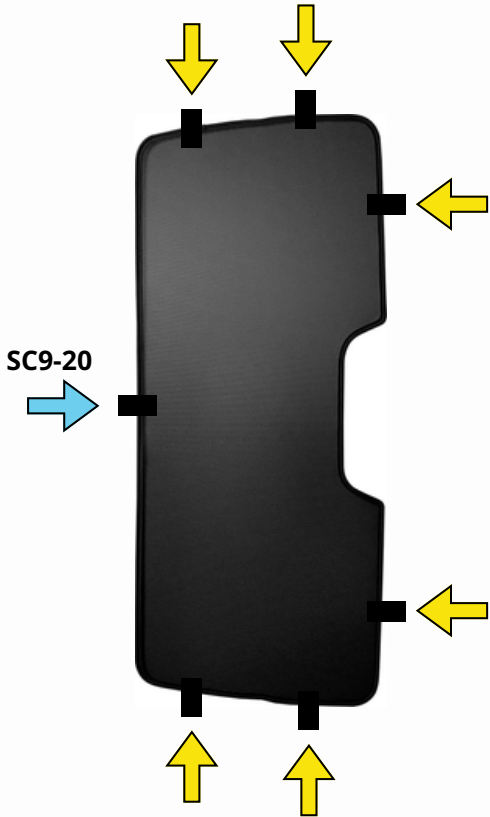

6x SC7-20



1x SC9-20

