

MONTAGEANLEITUNG

sun-10406abc · VW Tiguan Allspace Typ 5N 2017-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató


CZ: Návod k montáži

LV: Montāžas instrukcija


HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

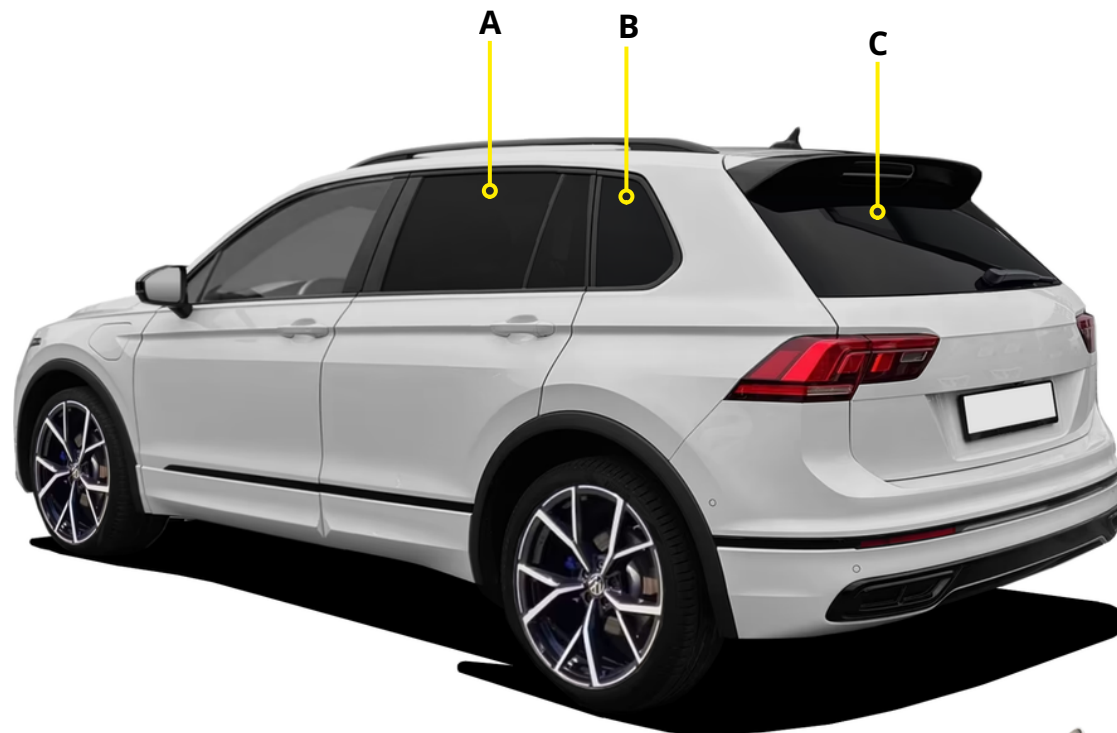

2x A

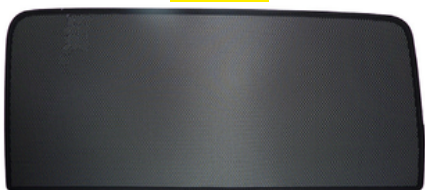


2x B




1x C



1x





10x SC3-40



2x SC9-20


MONTAGEANLEITUNG

sun-10406abc · VW Tiguan Allspace Typ 5N 2017-

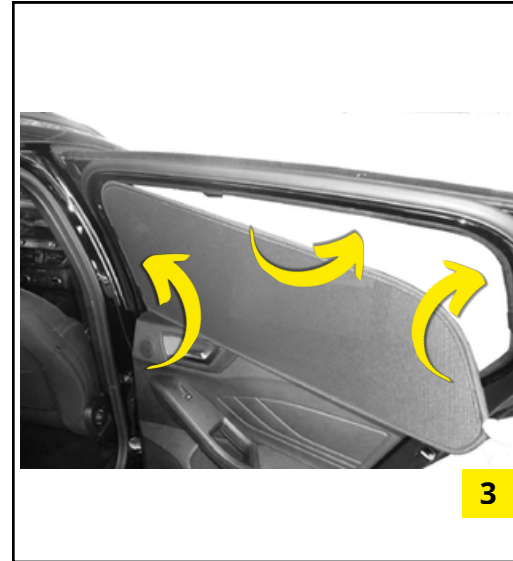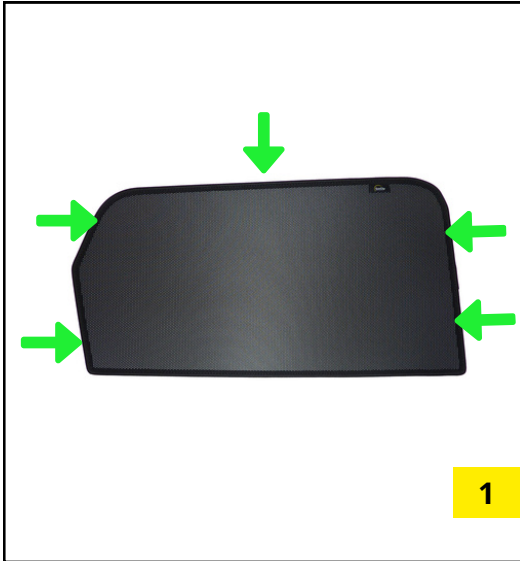

MONTAGEANLEITUNG

sun-10406abc · VW Tiguan Allspace Typ 5N 2017-

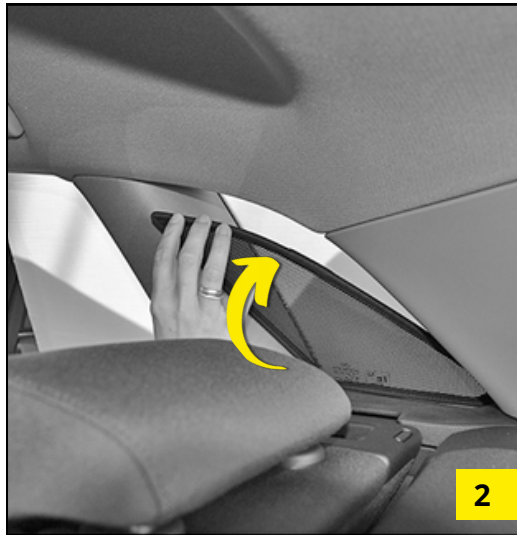

MONTAGEANLEITUNG

sun-10406abc · VW Tiguan Allspace Typ 5N 2017-

