



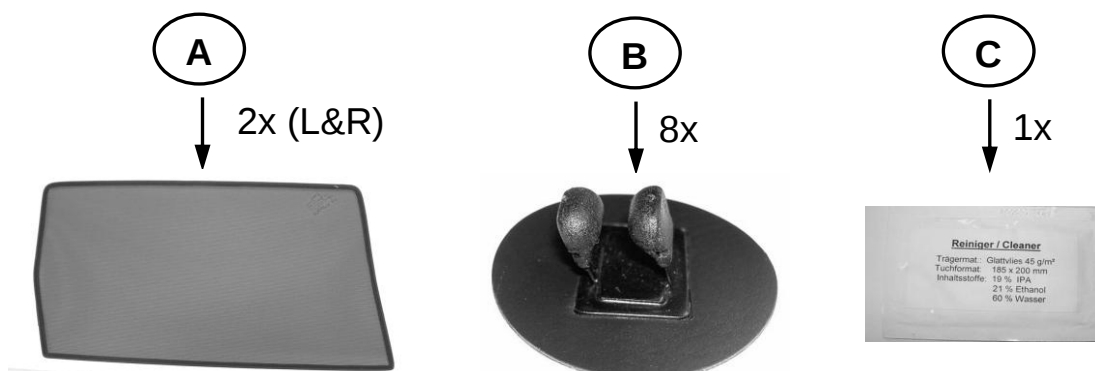
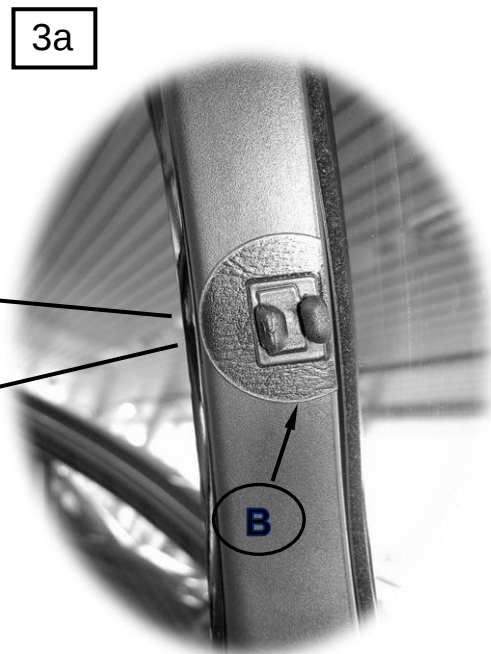
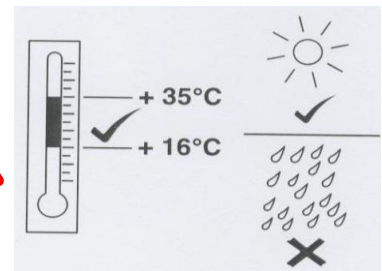
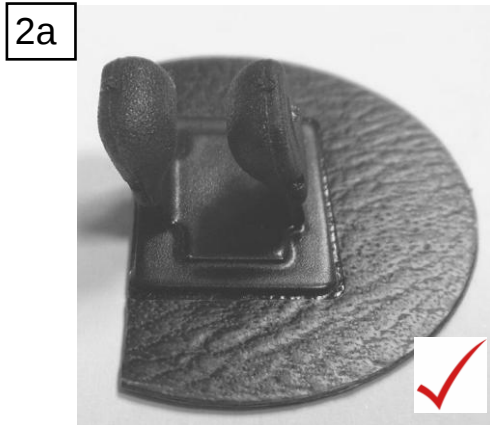
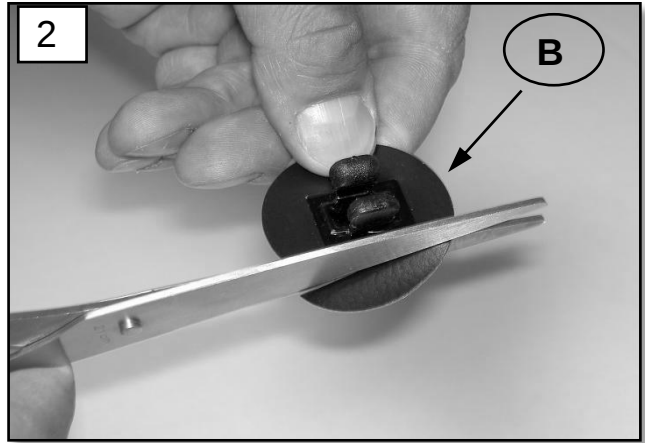
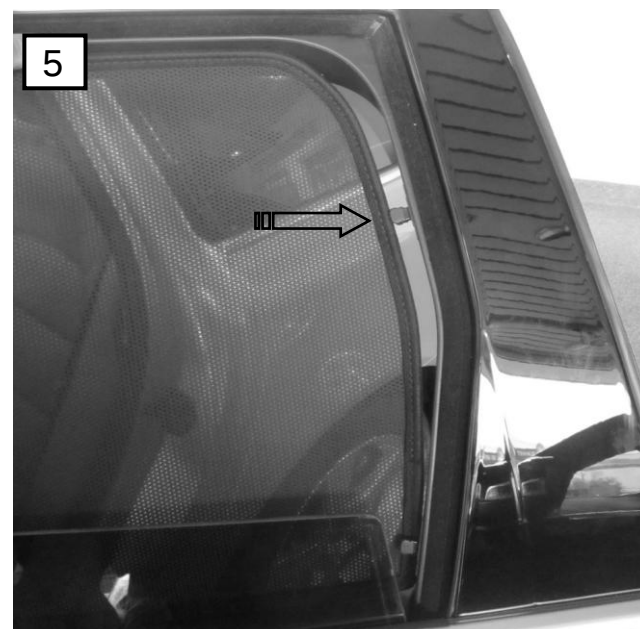
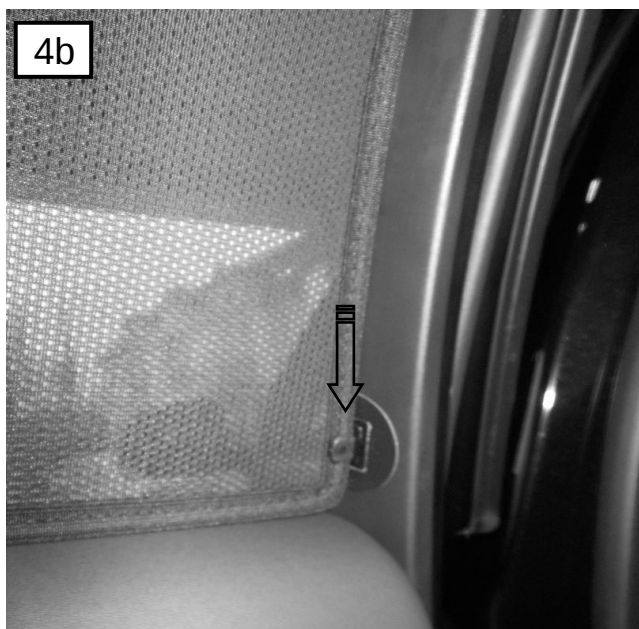


Sonniboy Volvo V70 Kombi, 2007-2016
078302ABC

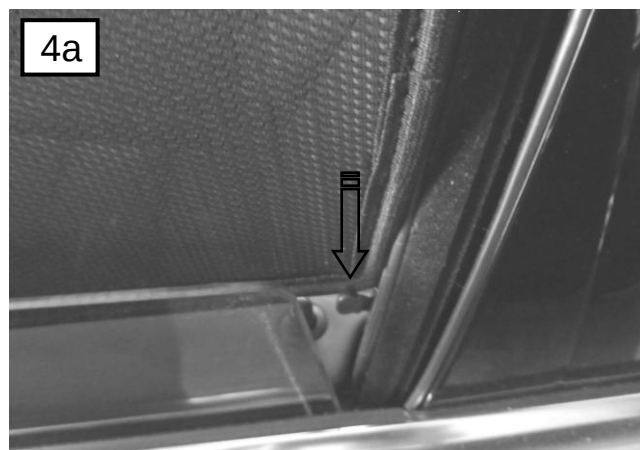

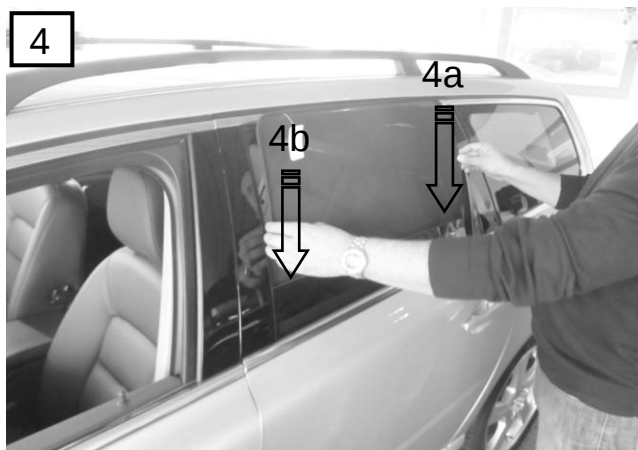


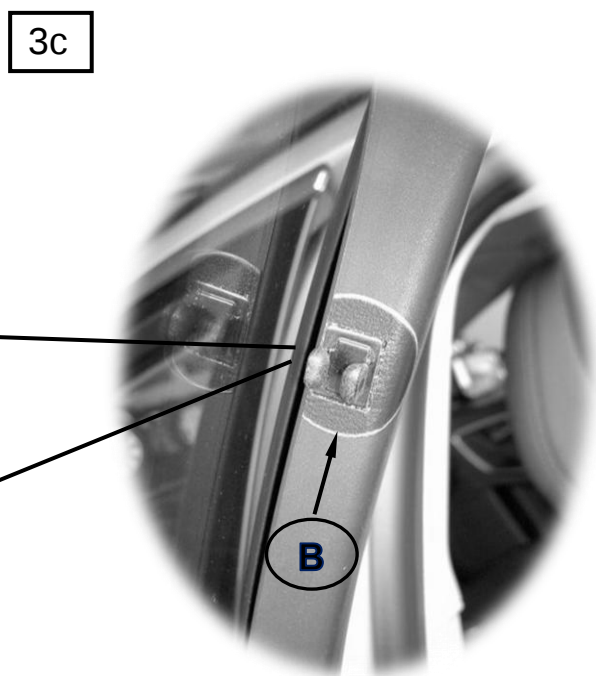

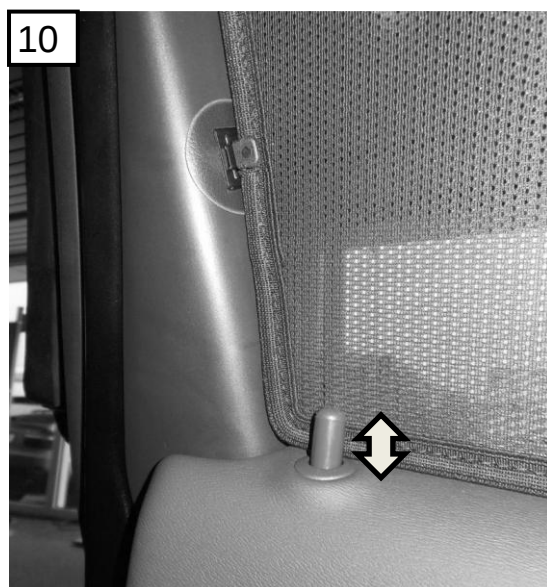

D

2x


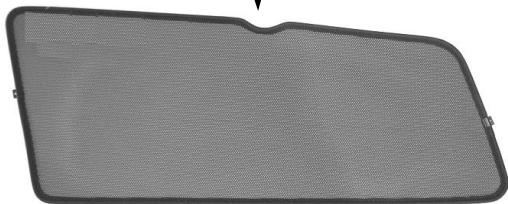


E


4x



11

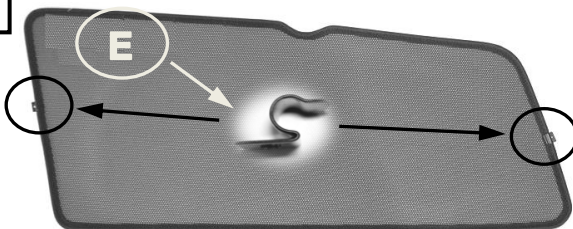


12

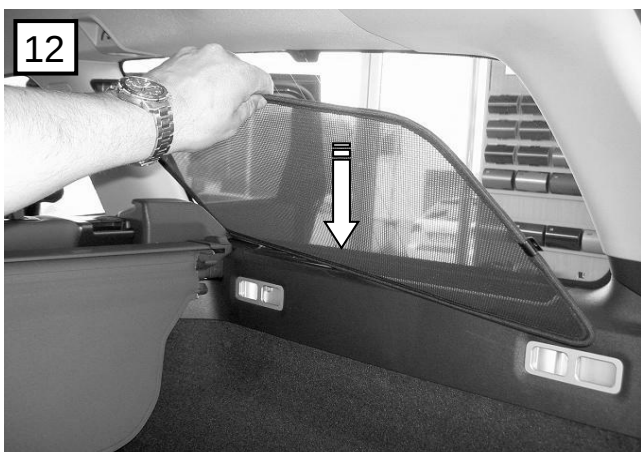

13



14

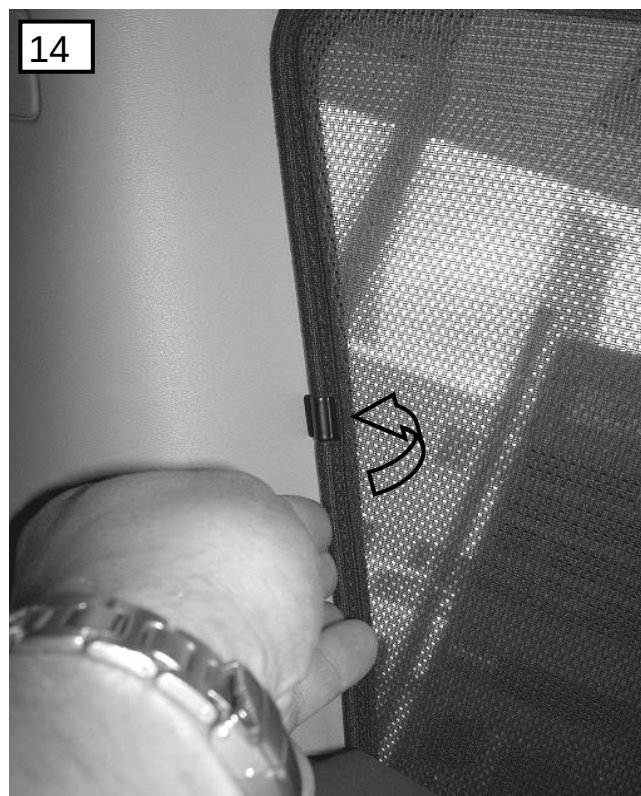

15



