

MONTAGEANLEITUNG

sun-10467abc- Mercedes E-Klasse T-Modell 2009-2017

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucţiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija


HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

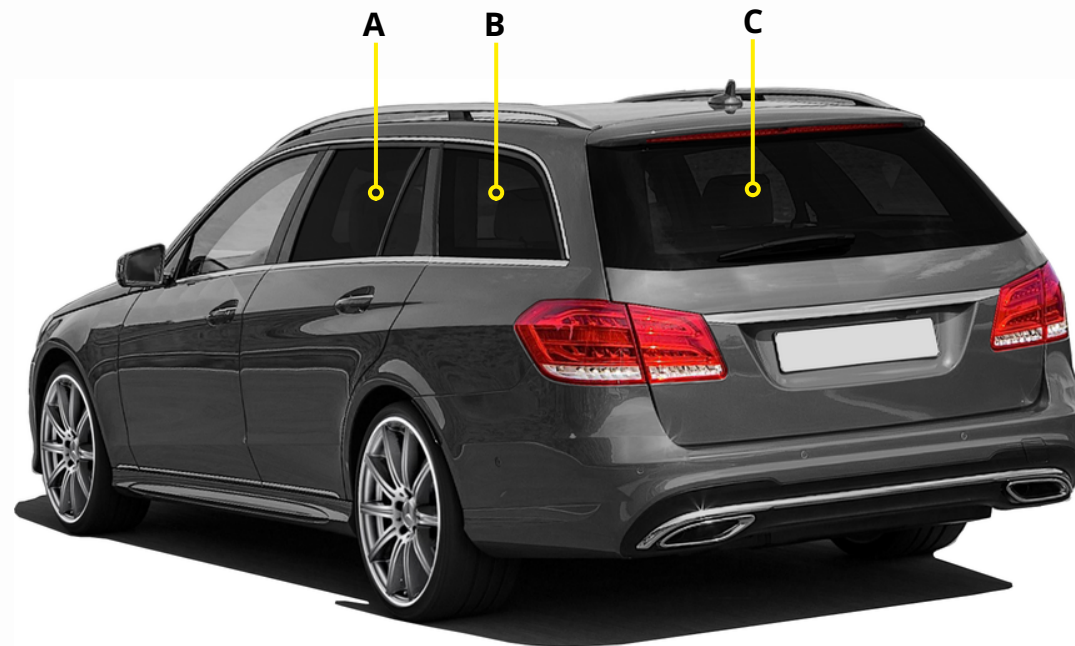

2x A

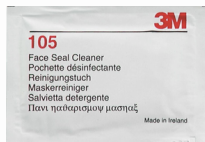


2x B



1x C



6x KC1



2x SC8-20



2x SC8-10







2x SC8-20




MONTAGEANLEITUNG

sun-10467abc- Mercedes E-Klasse T-Modell 2009-2017

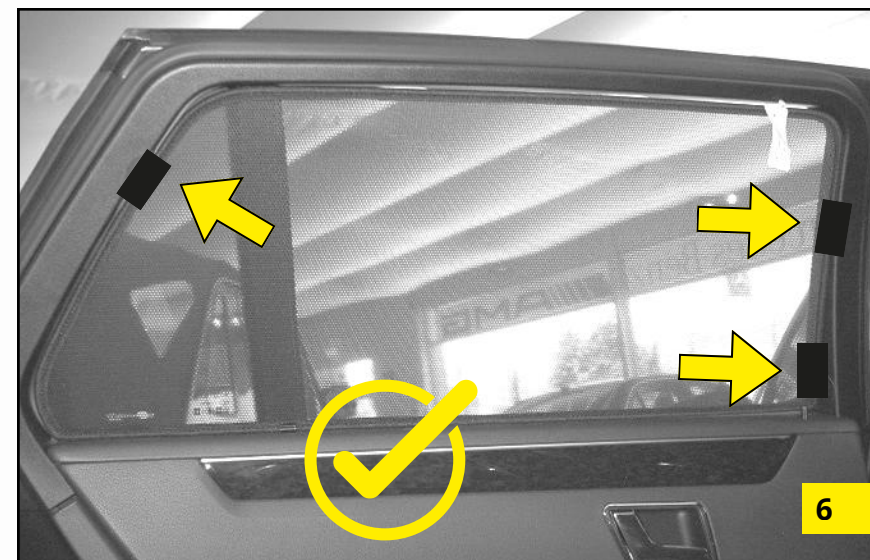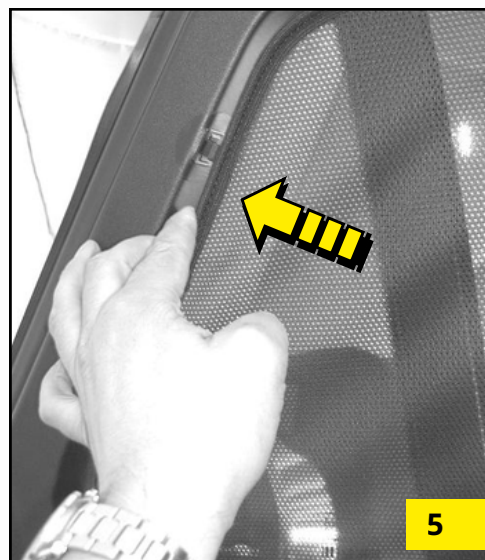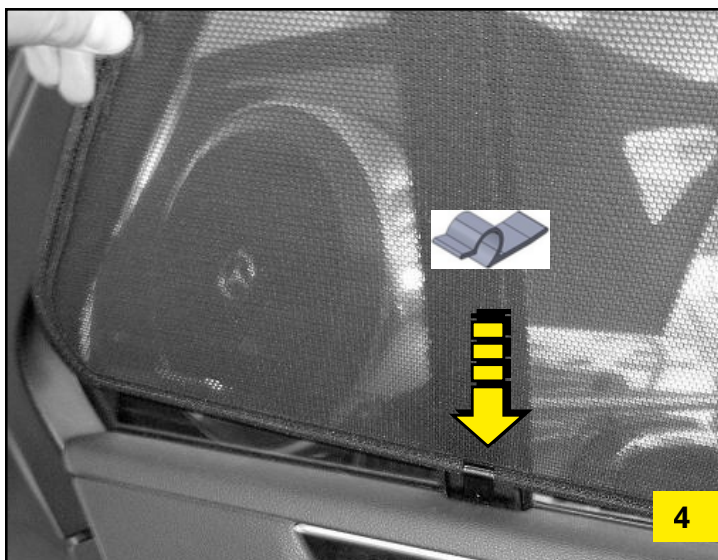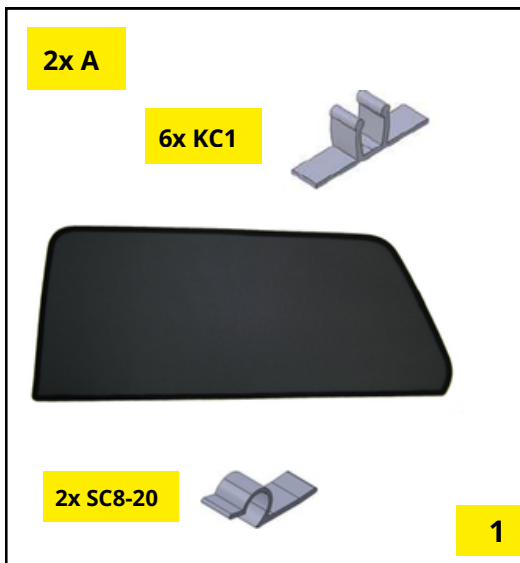

MONTAGEANLEITUNG


sun-10467abc- Mercedes E-Klasse T-Modell 2009-2017

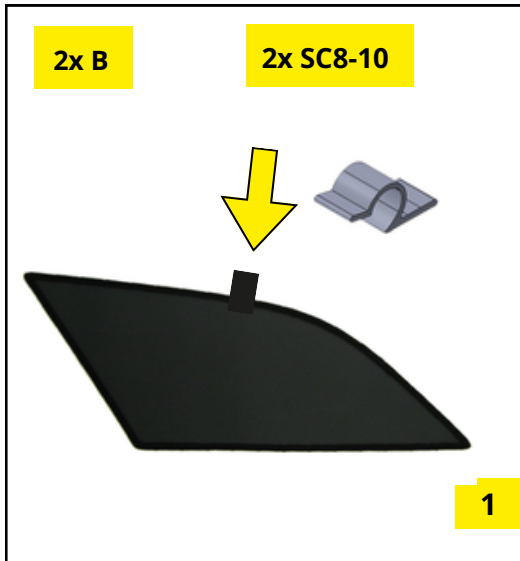

MONTAGEANLEITUNG

sun-10467abc- Mercedes E-Klasse T-Modell 2009-2017

1x C

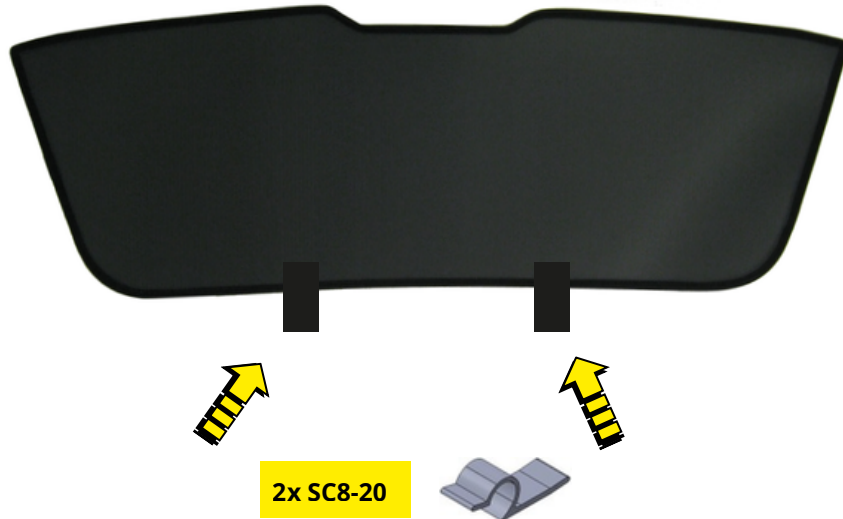

2x SC8-20

