

MONTAGEANLEITUNG

sun-10360abc · Audi A6 Avant 2025-

DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

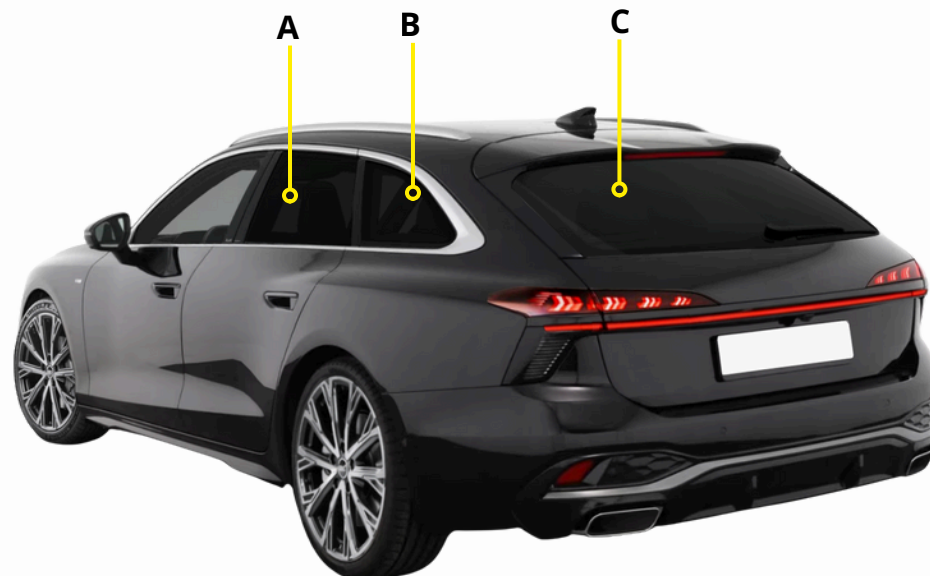

2x A



2x B



1x C




1x




8x SC27-20



2x SC10-20





3x SC7-20




MONTAGEANLEITUNG

sun-10360abc · Audi A6 Avant 2025-

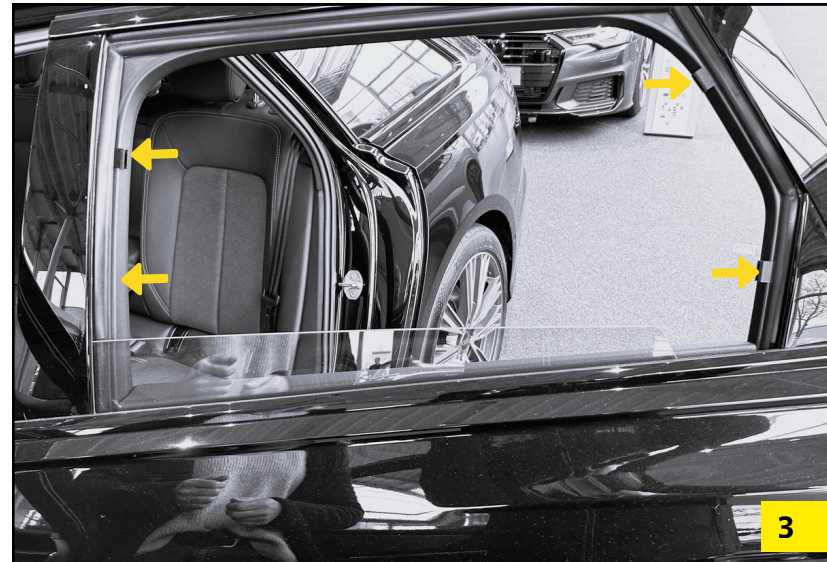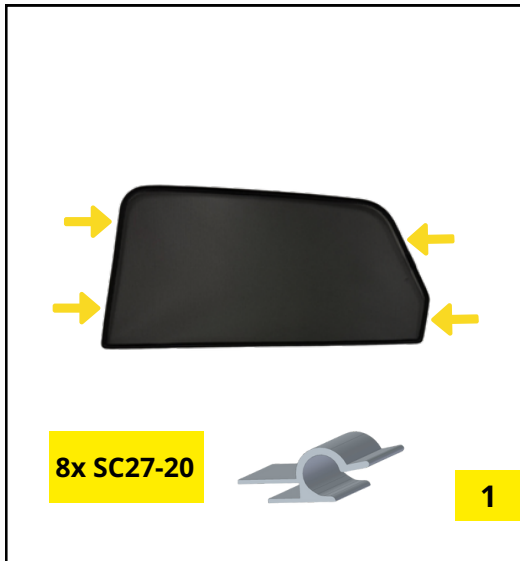

MONTAGEANLEITUNG

sun-10360abc · Audi A6 Avant 2025-

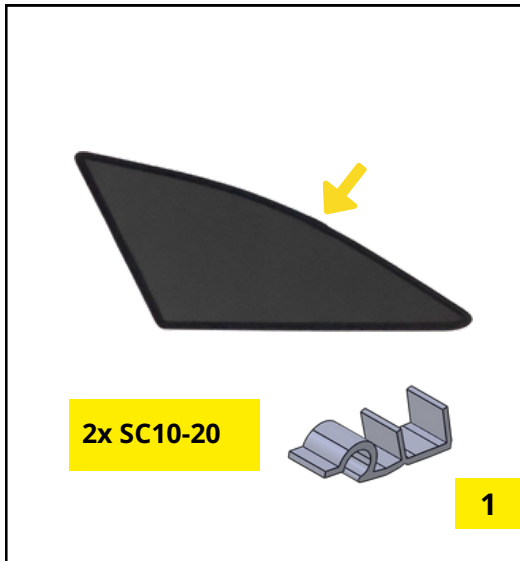

MONTAGEANLEITUNG

sun-10360abc · Audi A6 Avant 2025-

