

MONTAGEANLEITUNG

son-10100abc · Skoda Superb III Kombi 2015-

DE: Montageanleitung

MT: Istruzioni per l'installazione

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcja montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Upute za sastavljanje


CZ: Návod k montáži

LV: Montāžas instrukcija


HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване

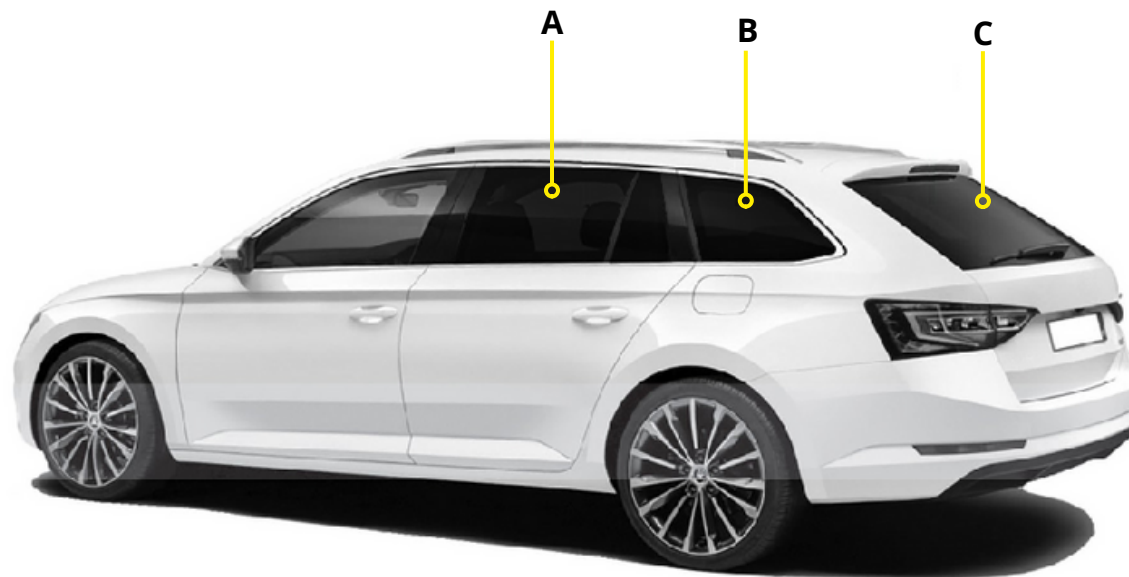

2x A




6x SC3-40

2x B



2x SC6-40

1x C







2x SC9-20

1x





MONTAGEANLEITUNG

son-10100abc · Skoda Superb III Kombi 2015-

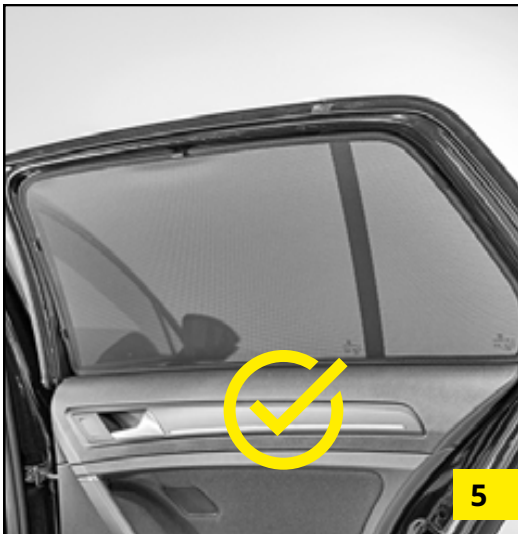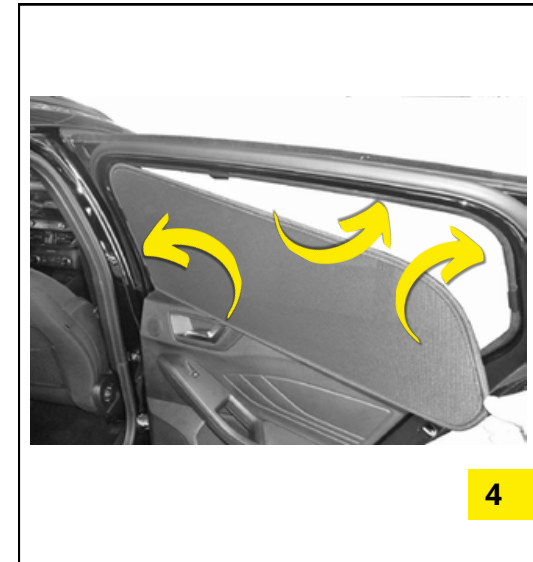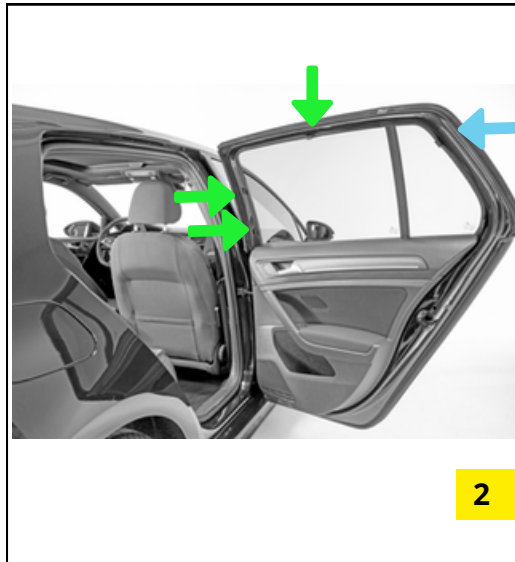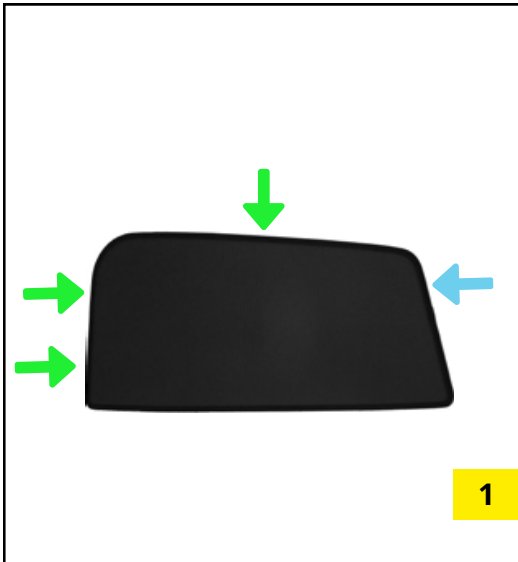

MONTAGEANLEITUNG

son-10100abc · Skoda Superb III Kombi 2015-

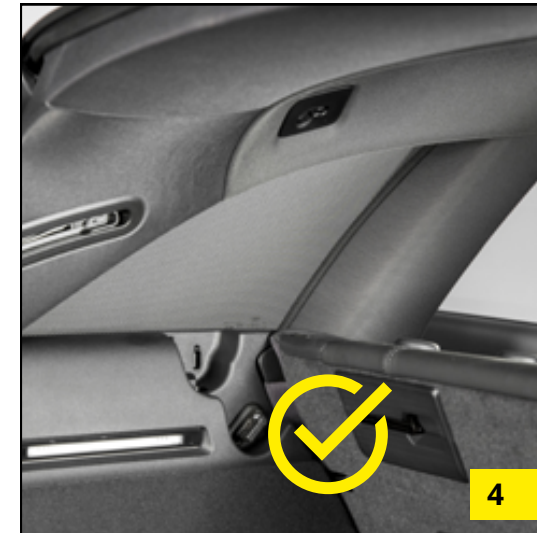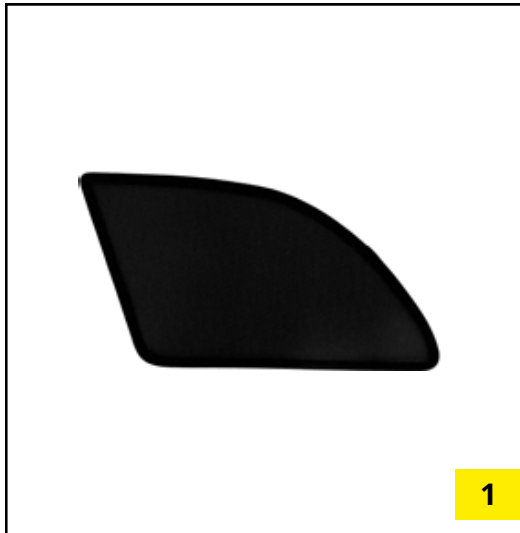

MONTAGEANLEITUNG

son-10100abc · Skoda Superb III Kombi 2015-

